




ERROR CODE 103, 121, 127, 177, 178

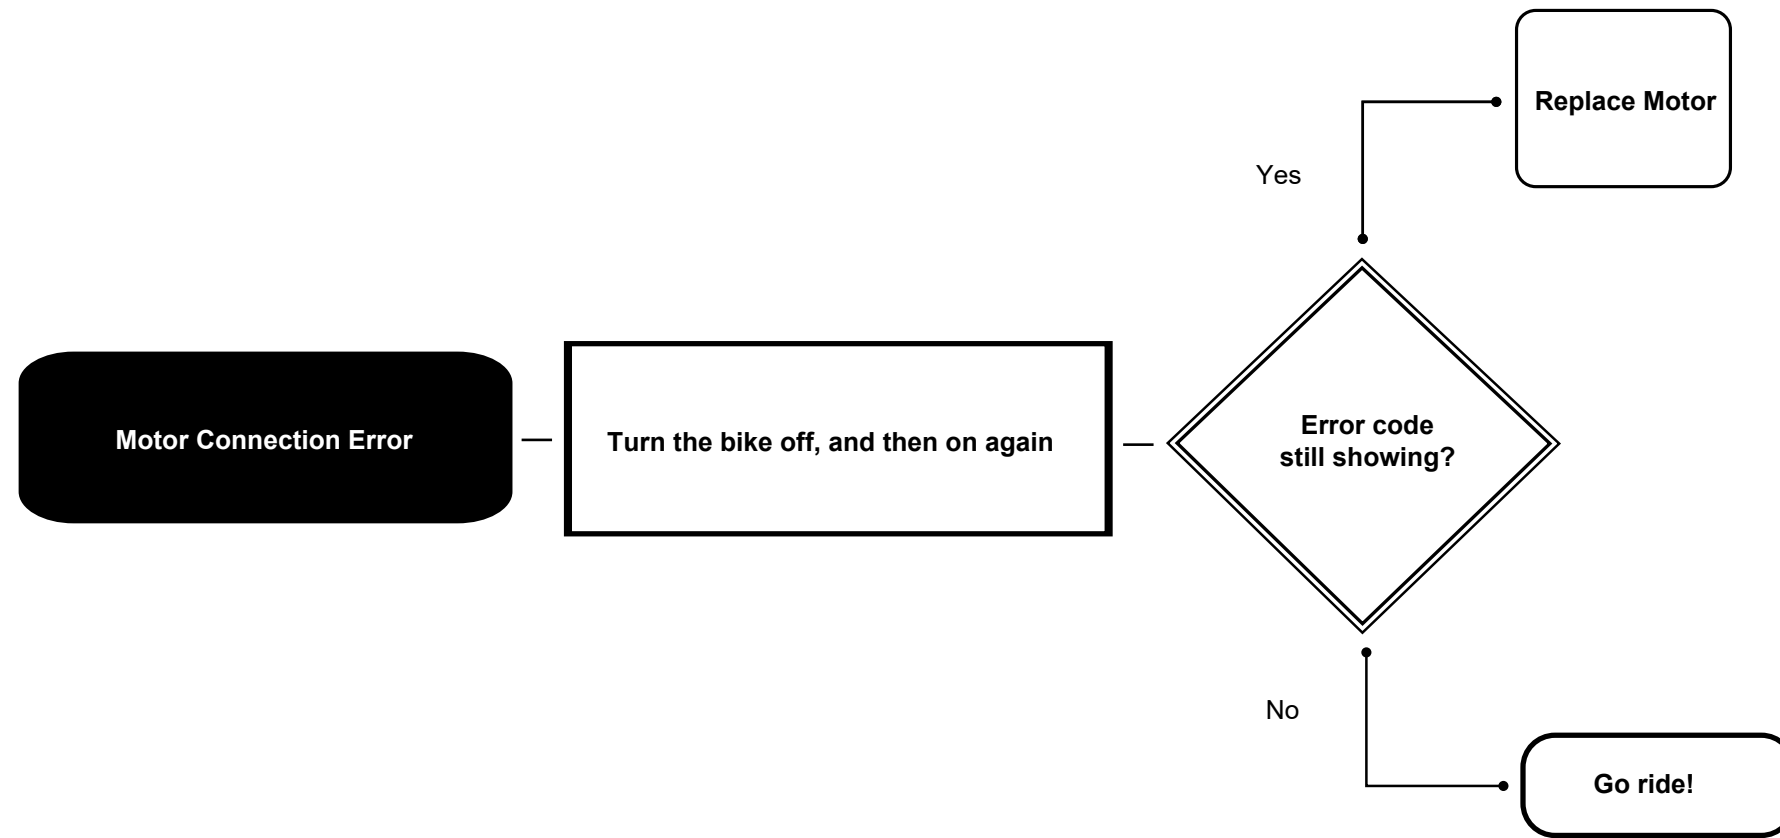


ERROR CODE 106, 109, 136, 139, 169, 176

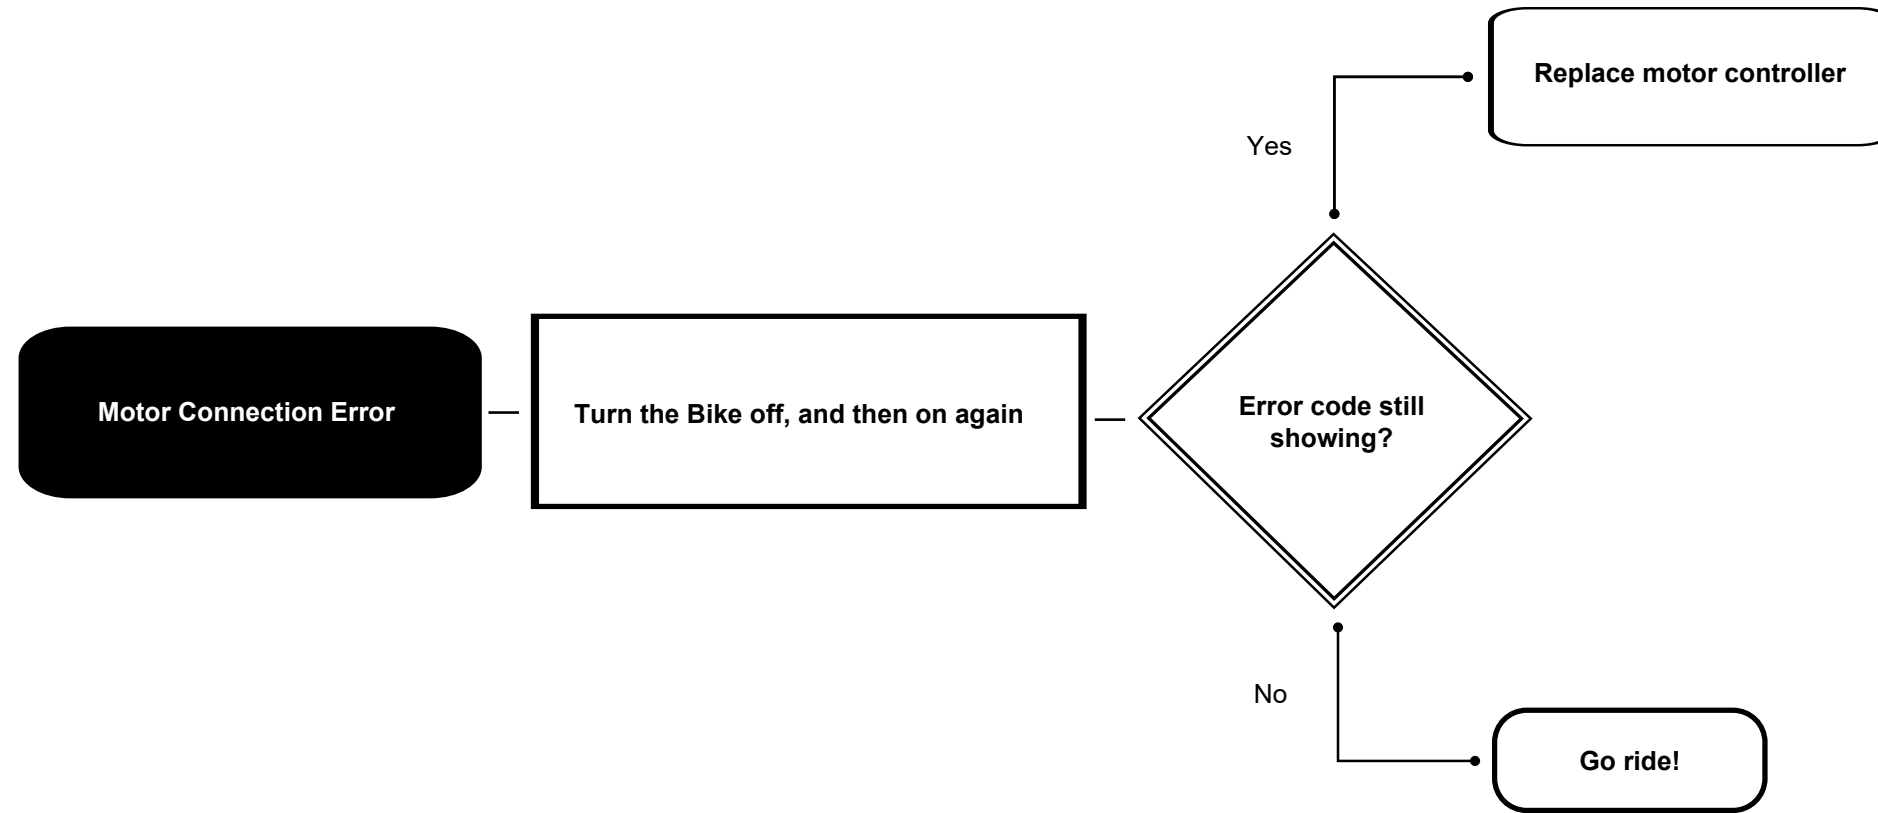


ERROR CODE 115, 185, 186

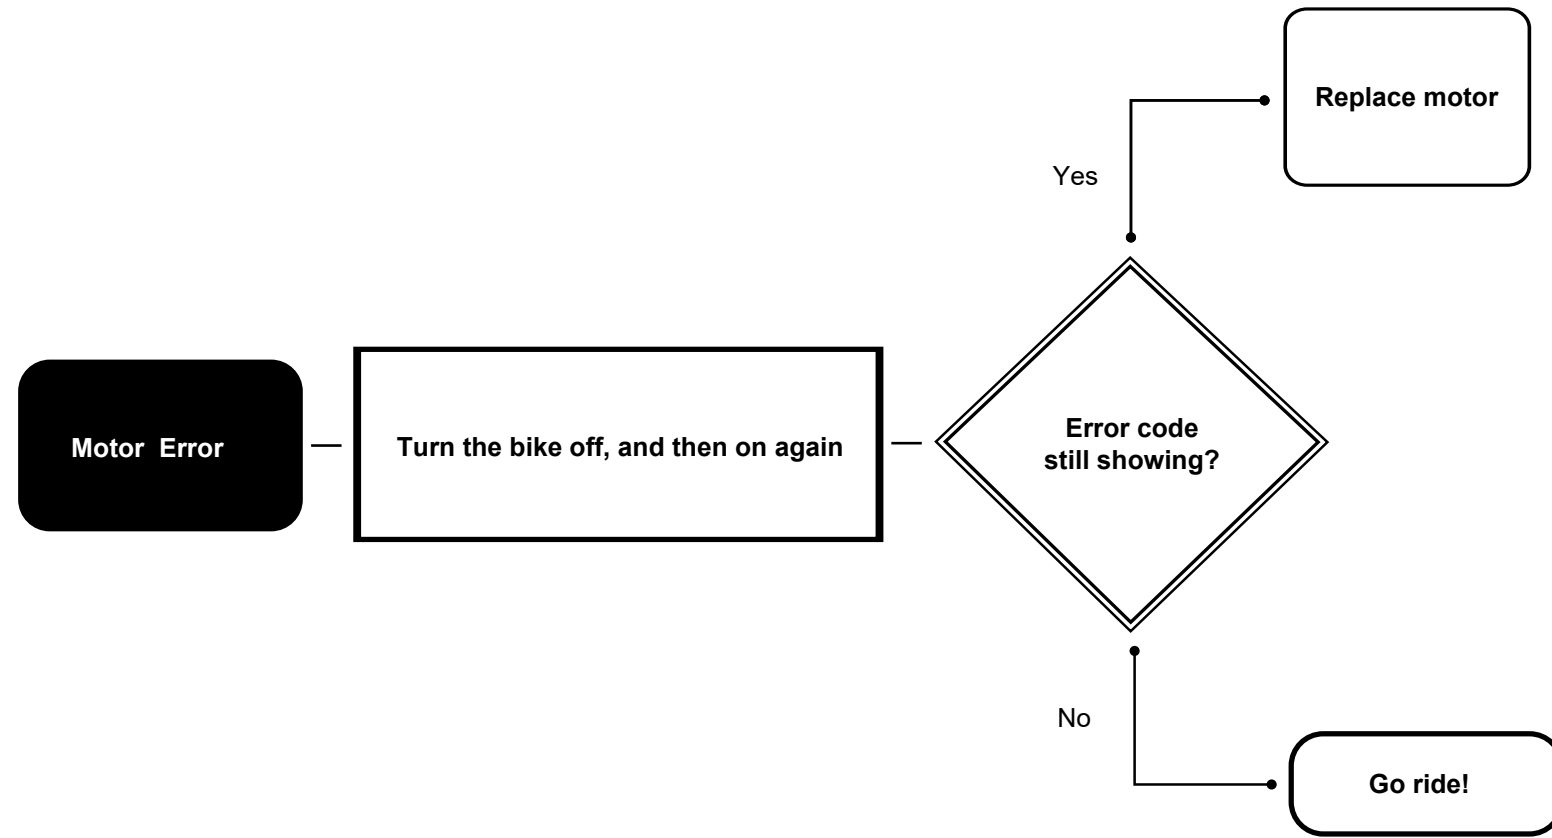


ERROR CODE 124, 166, 199

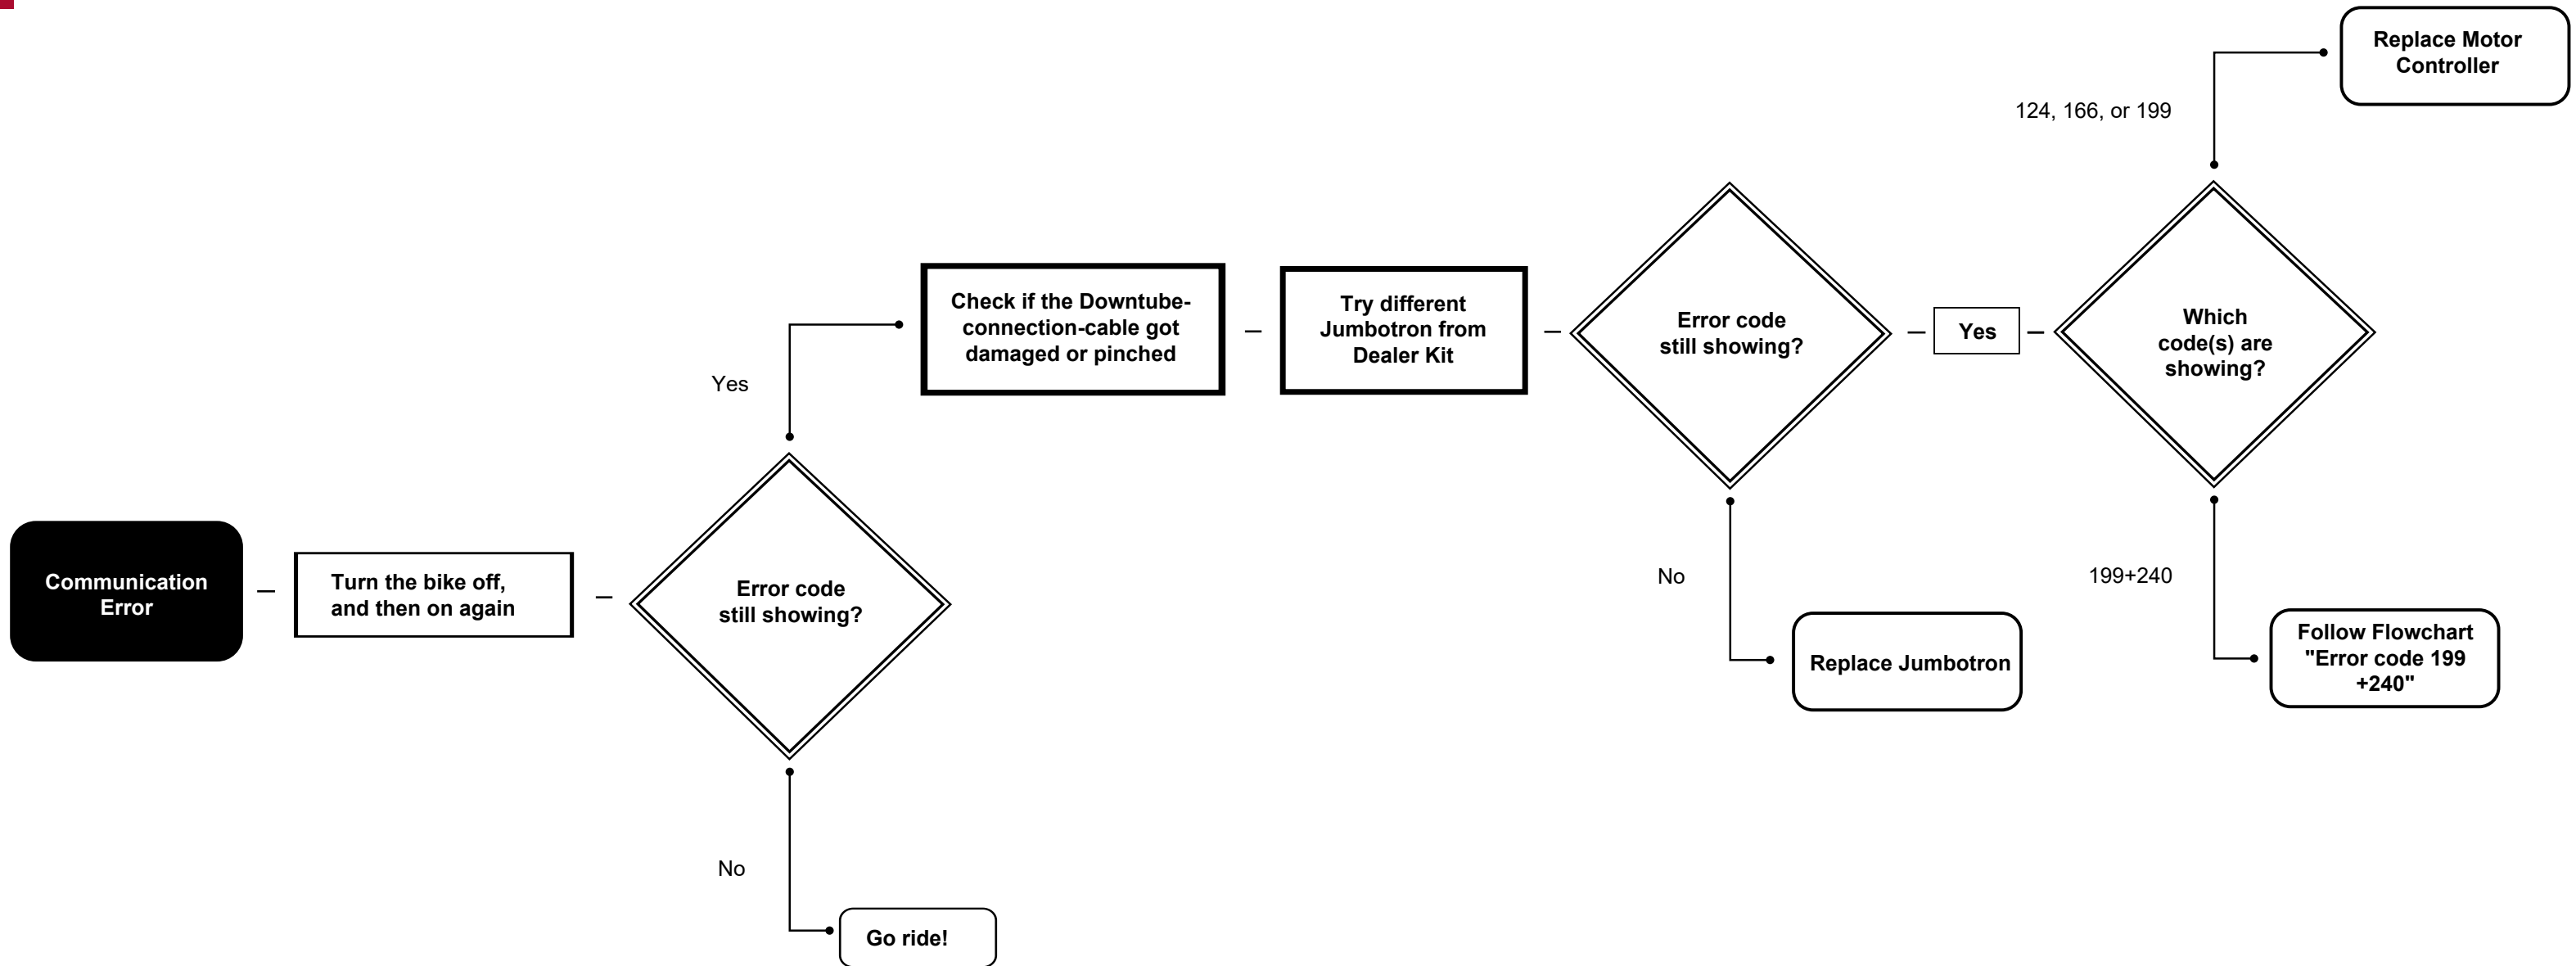


ERROR CODE 133

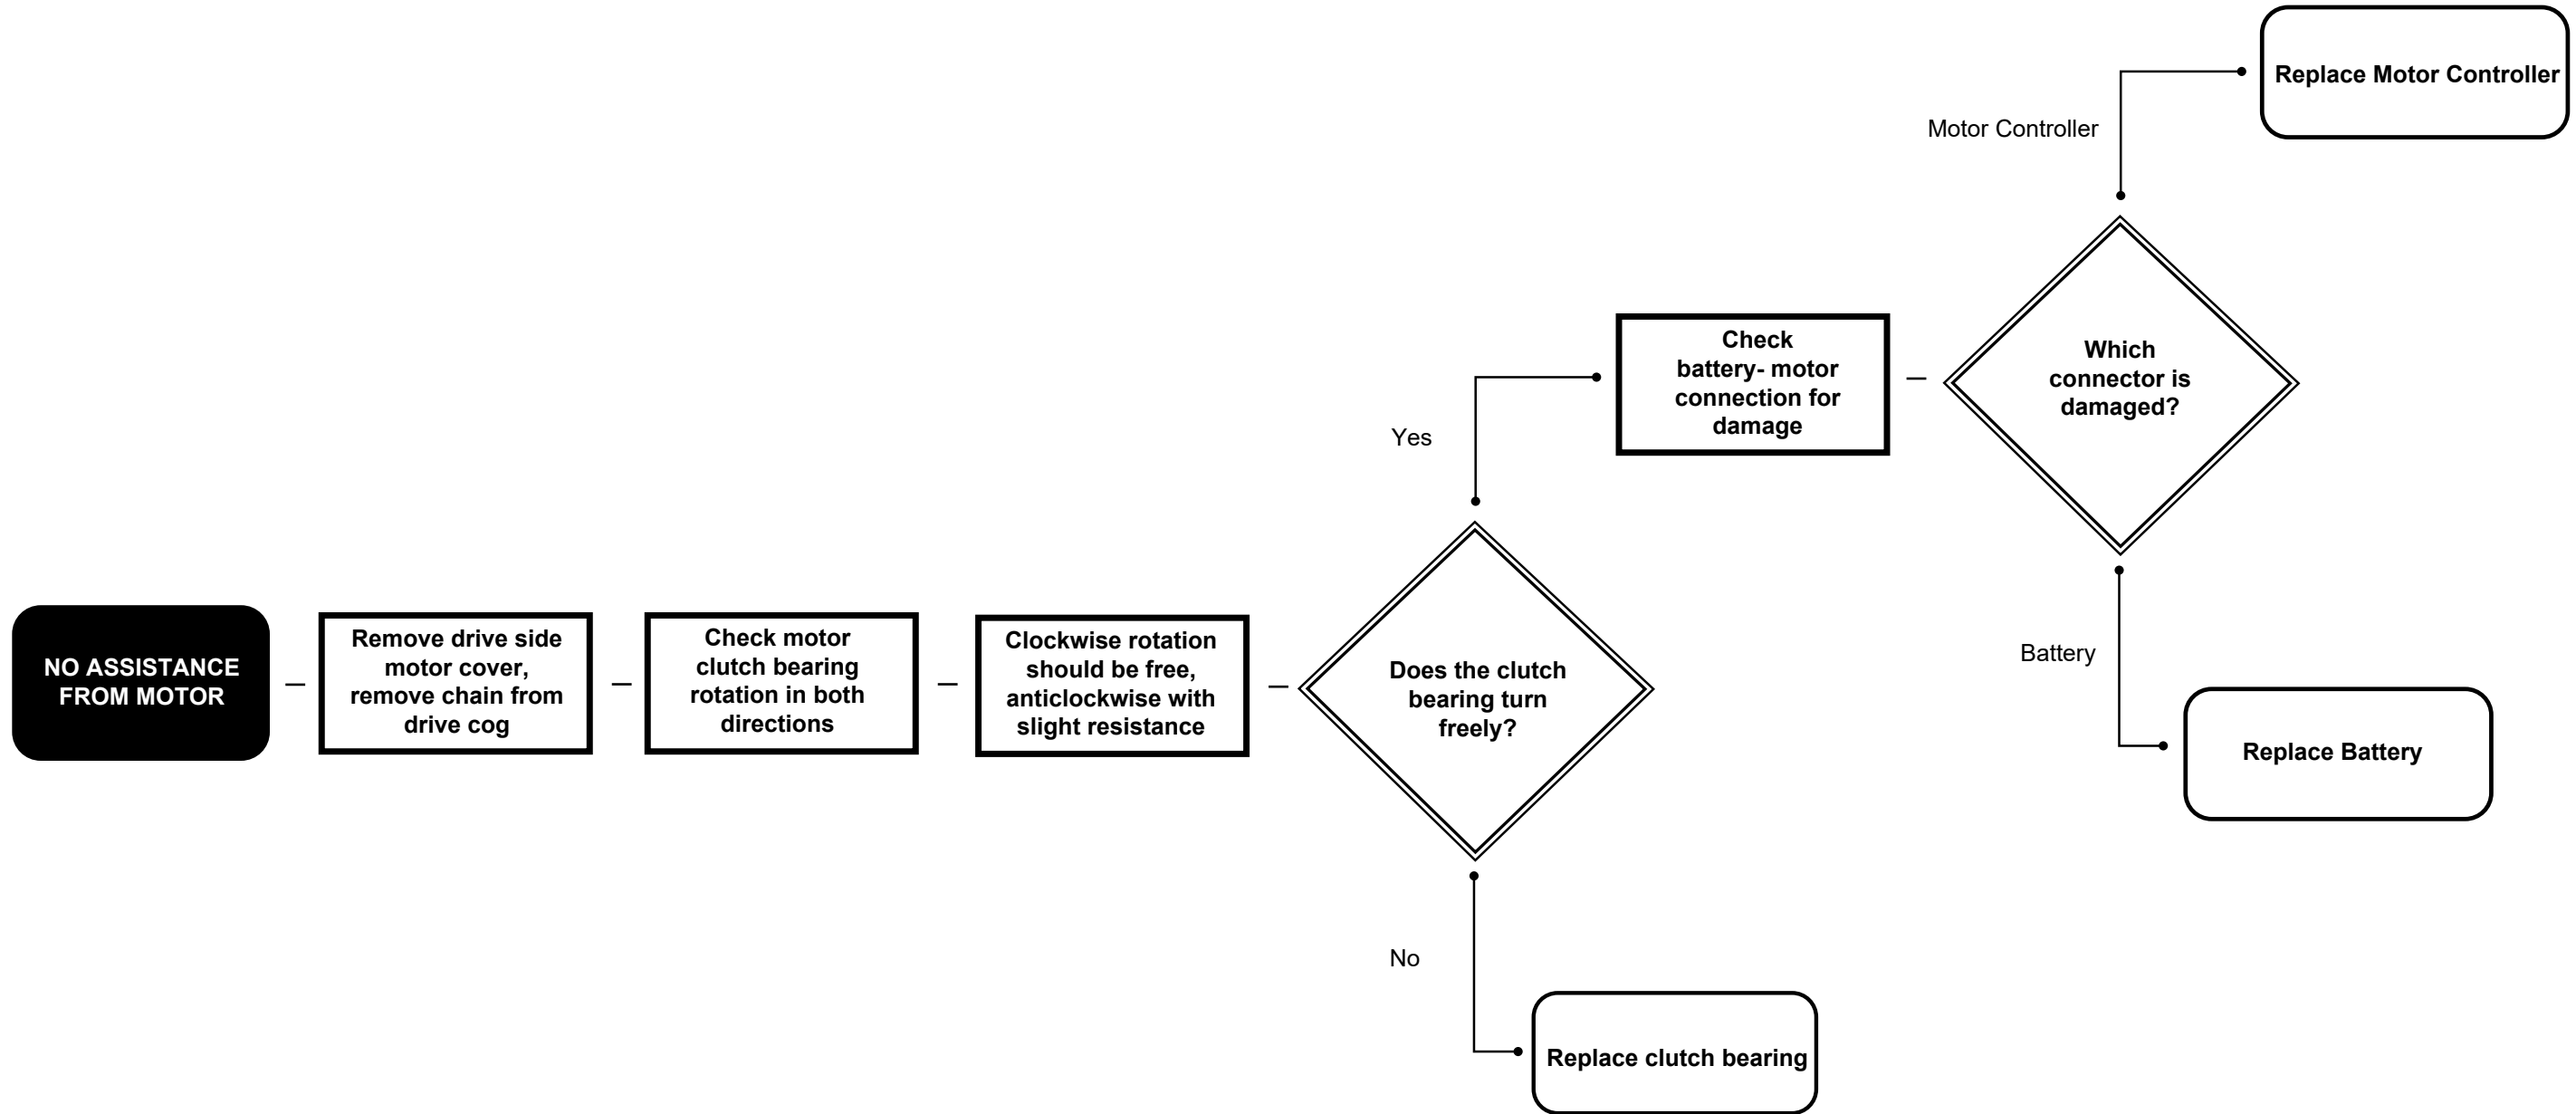


ERROR CODE 142

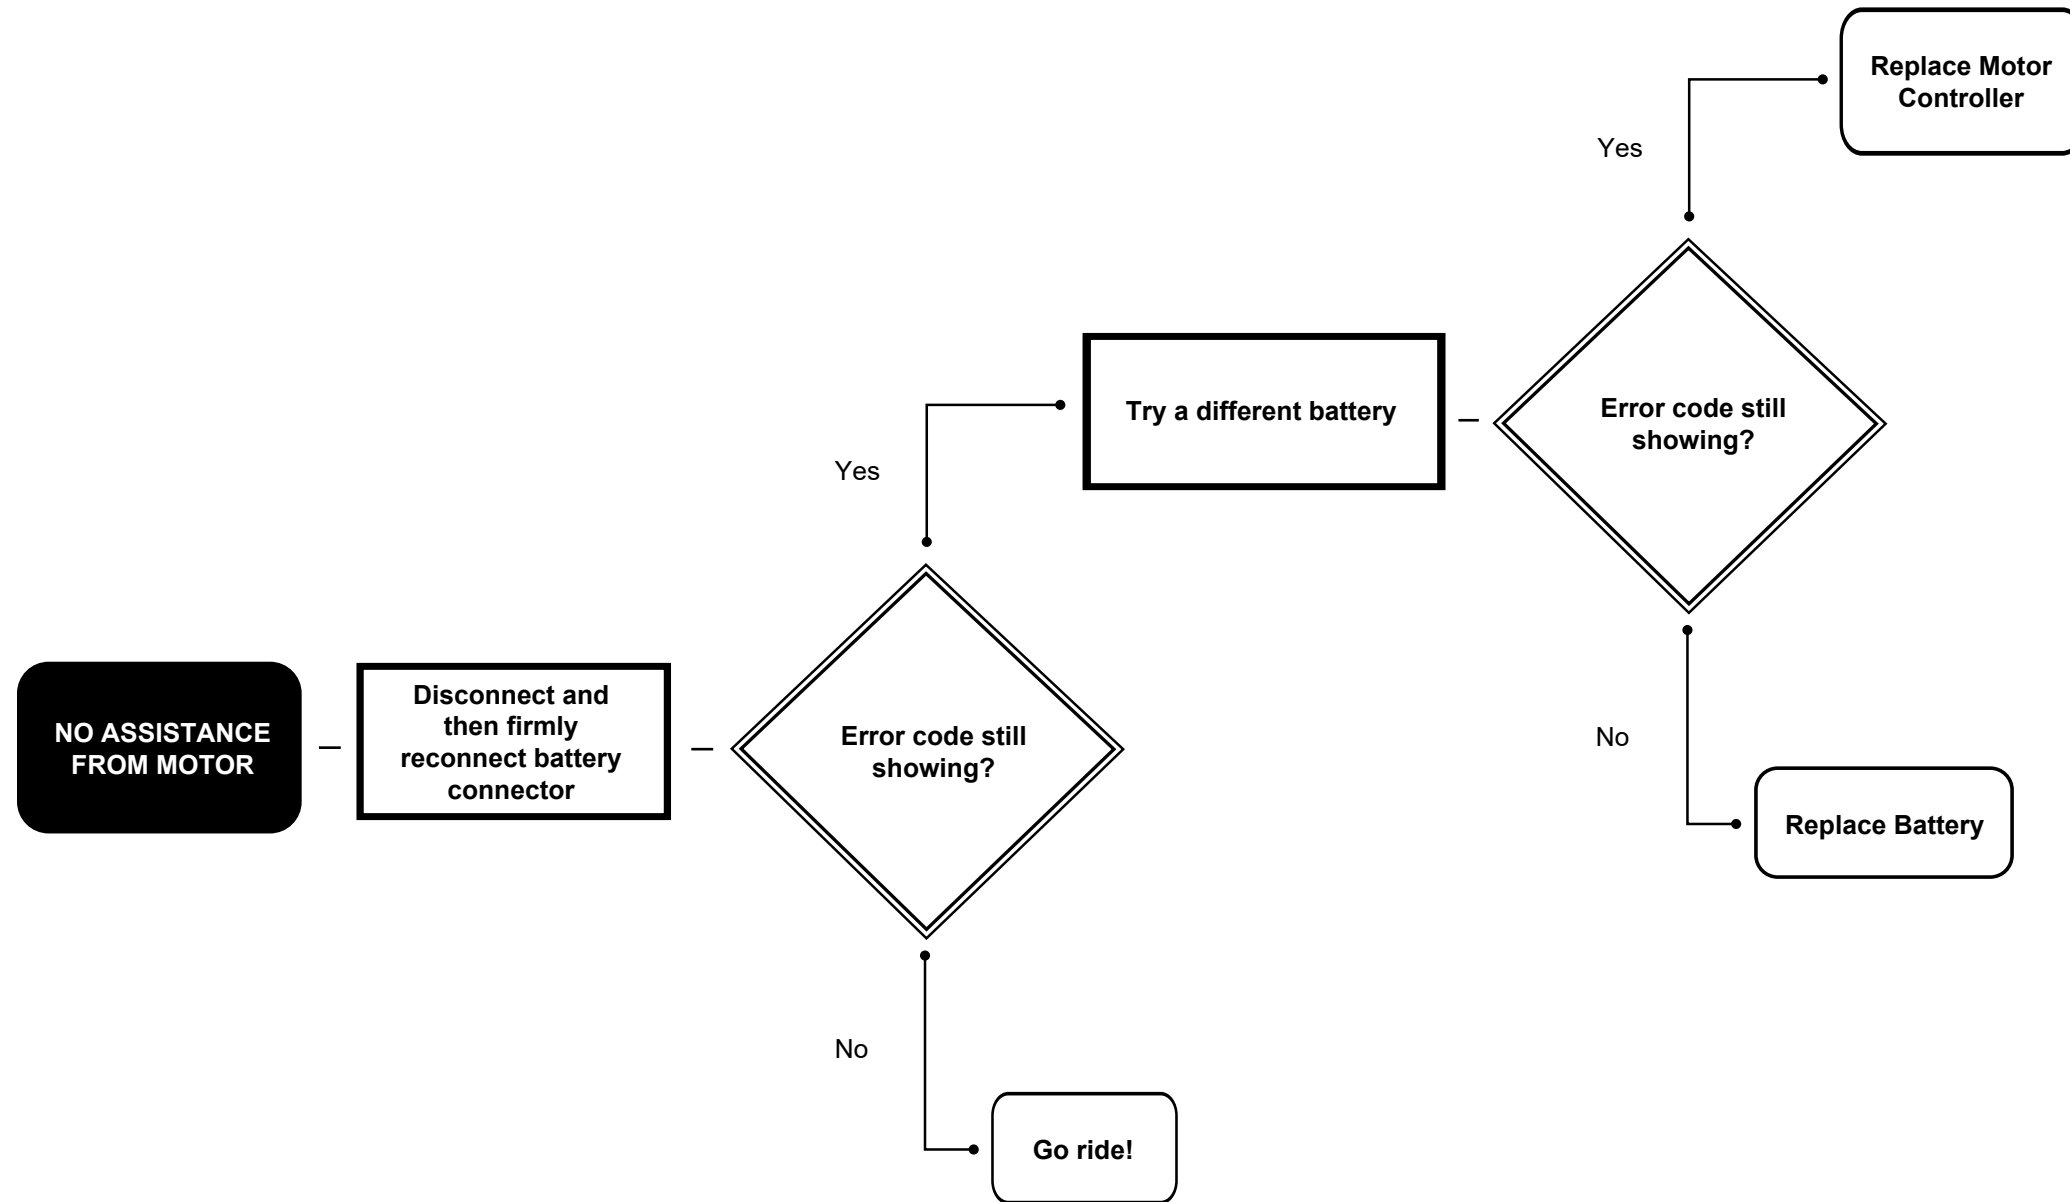


ERROR CODE 157

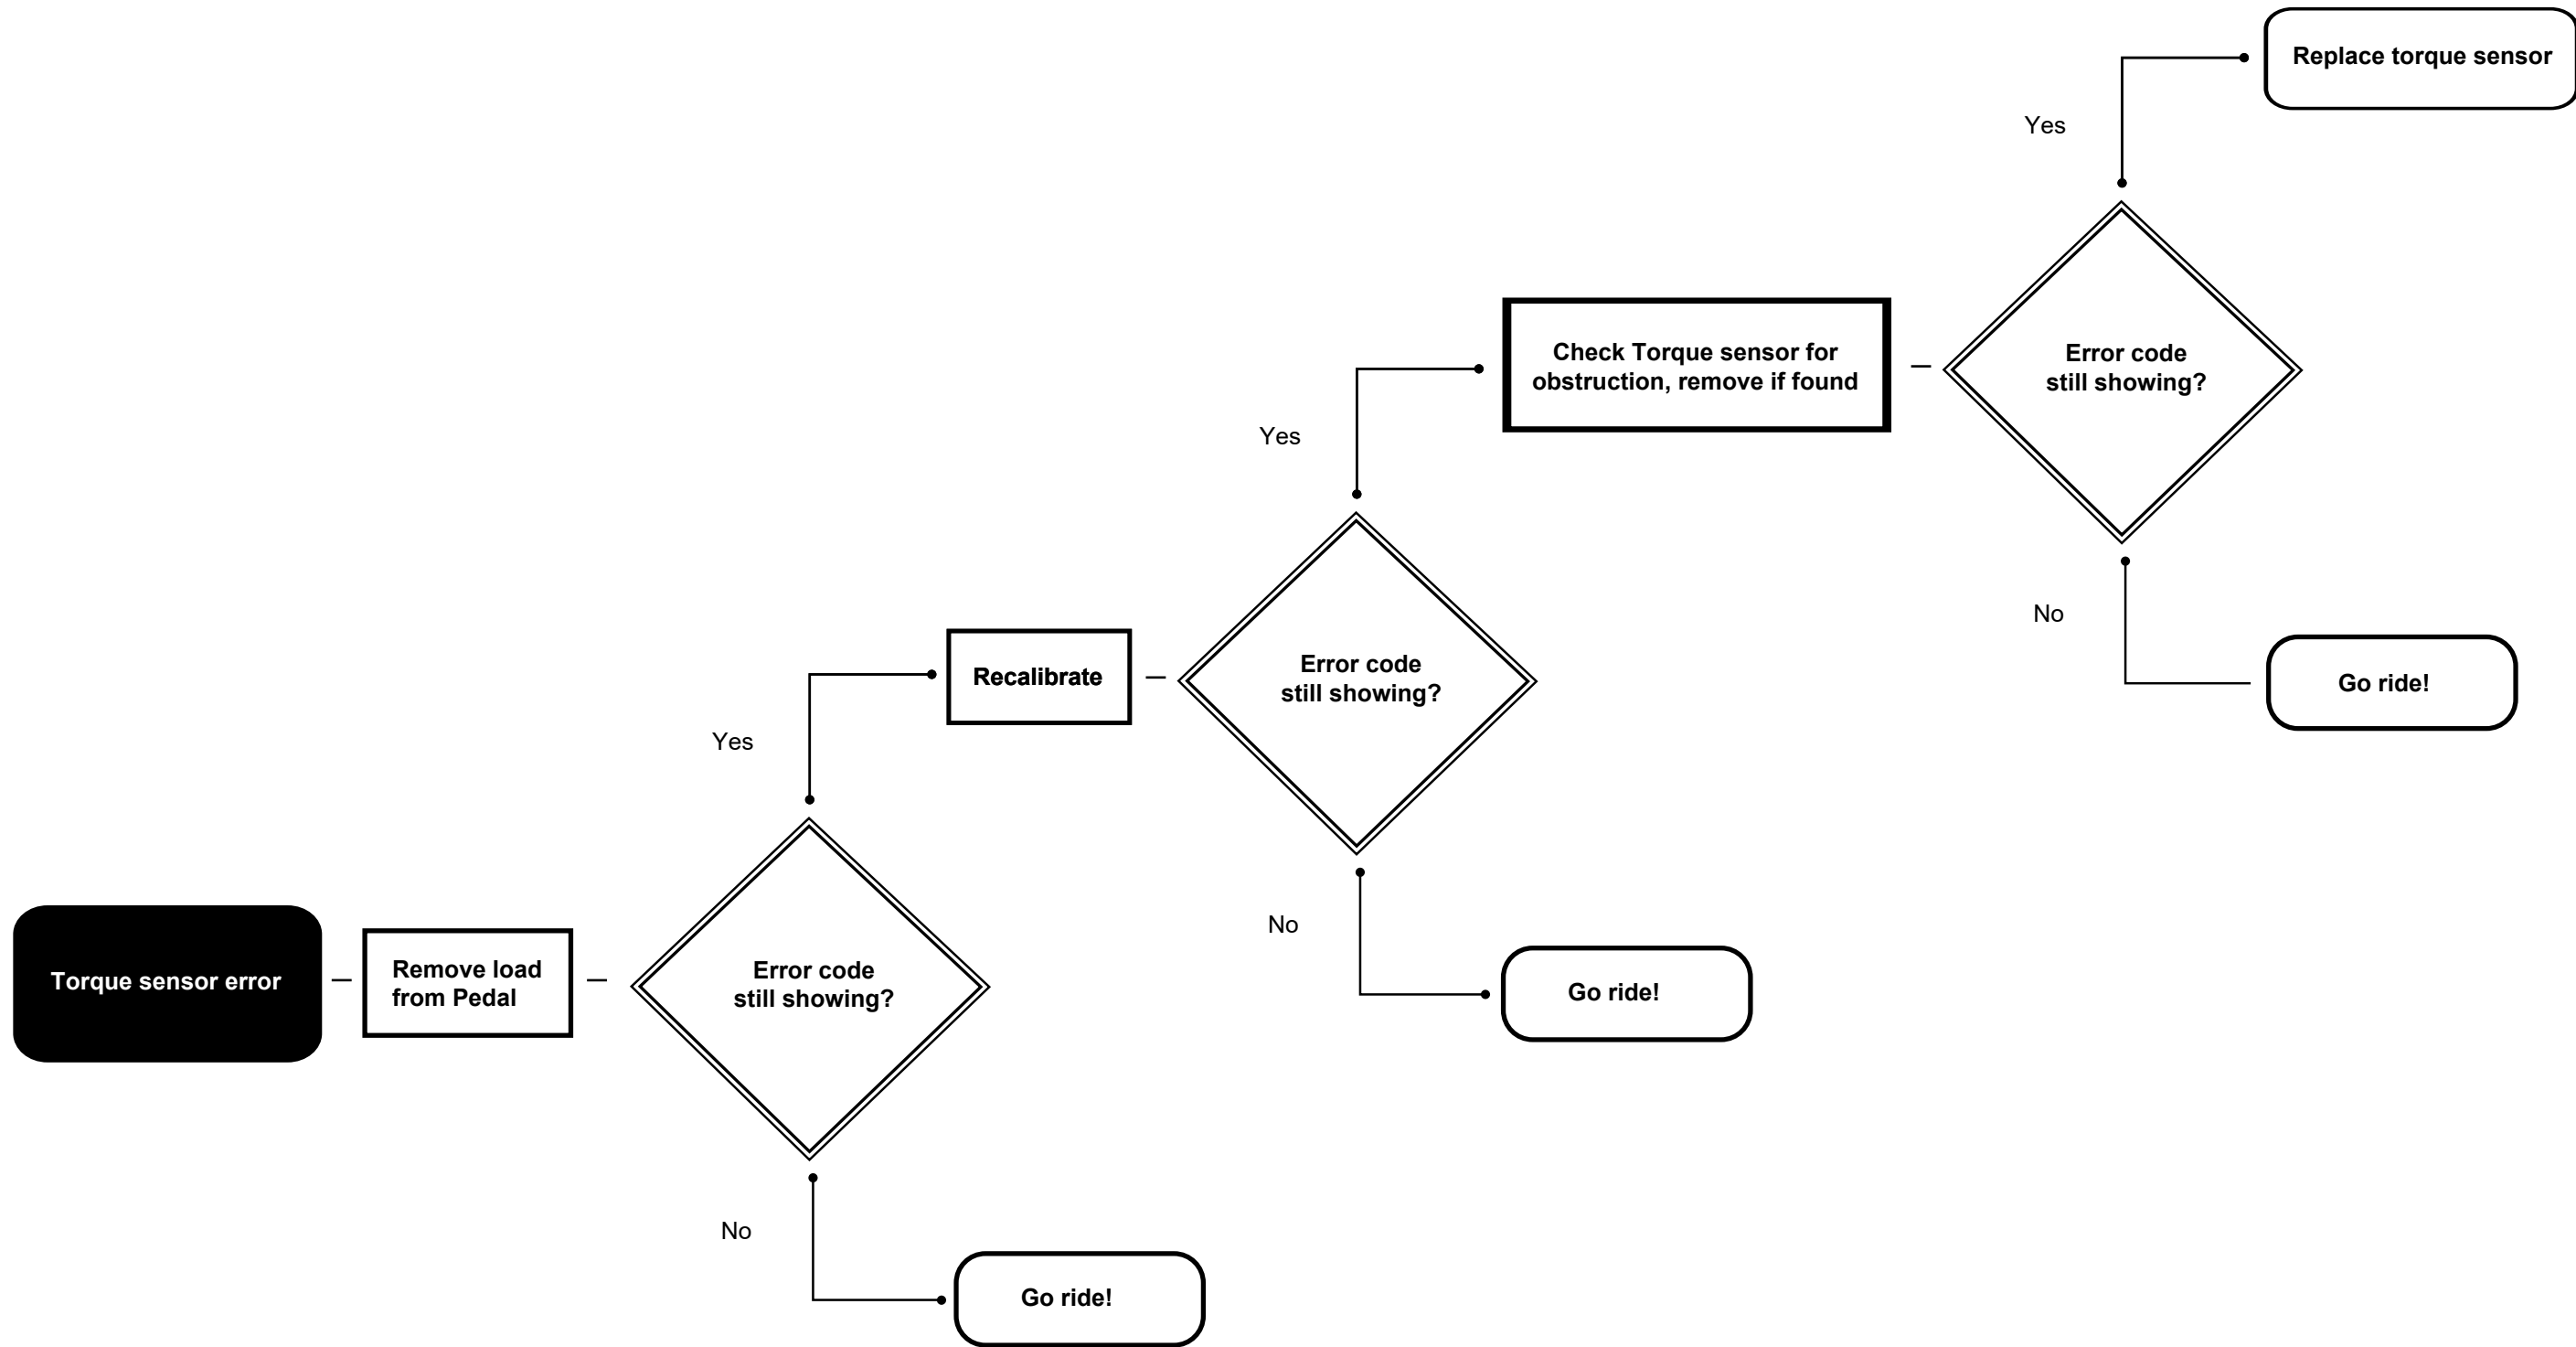


ERROR CODE 160

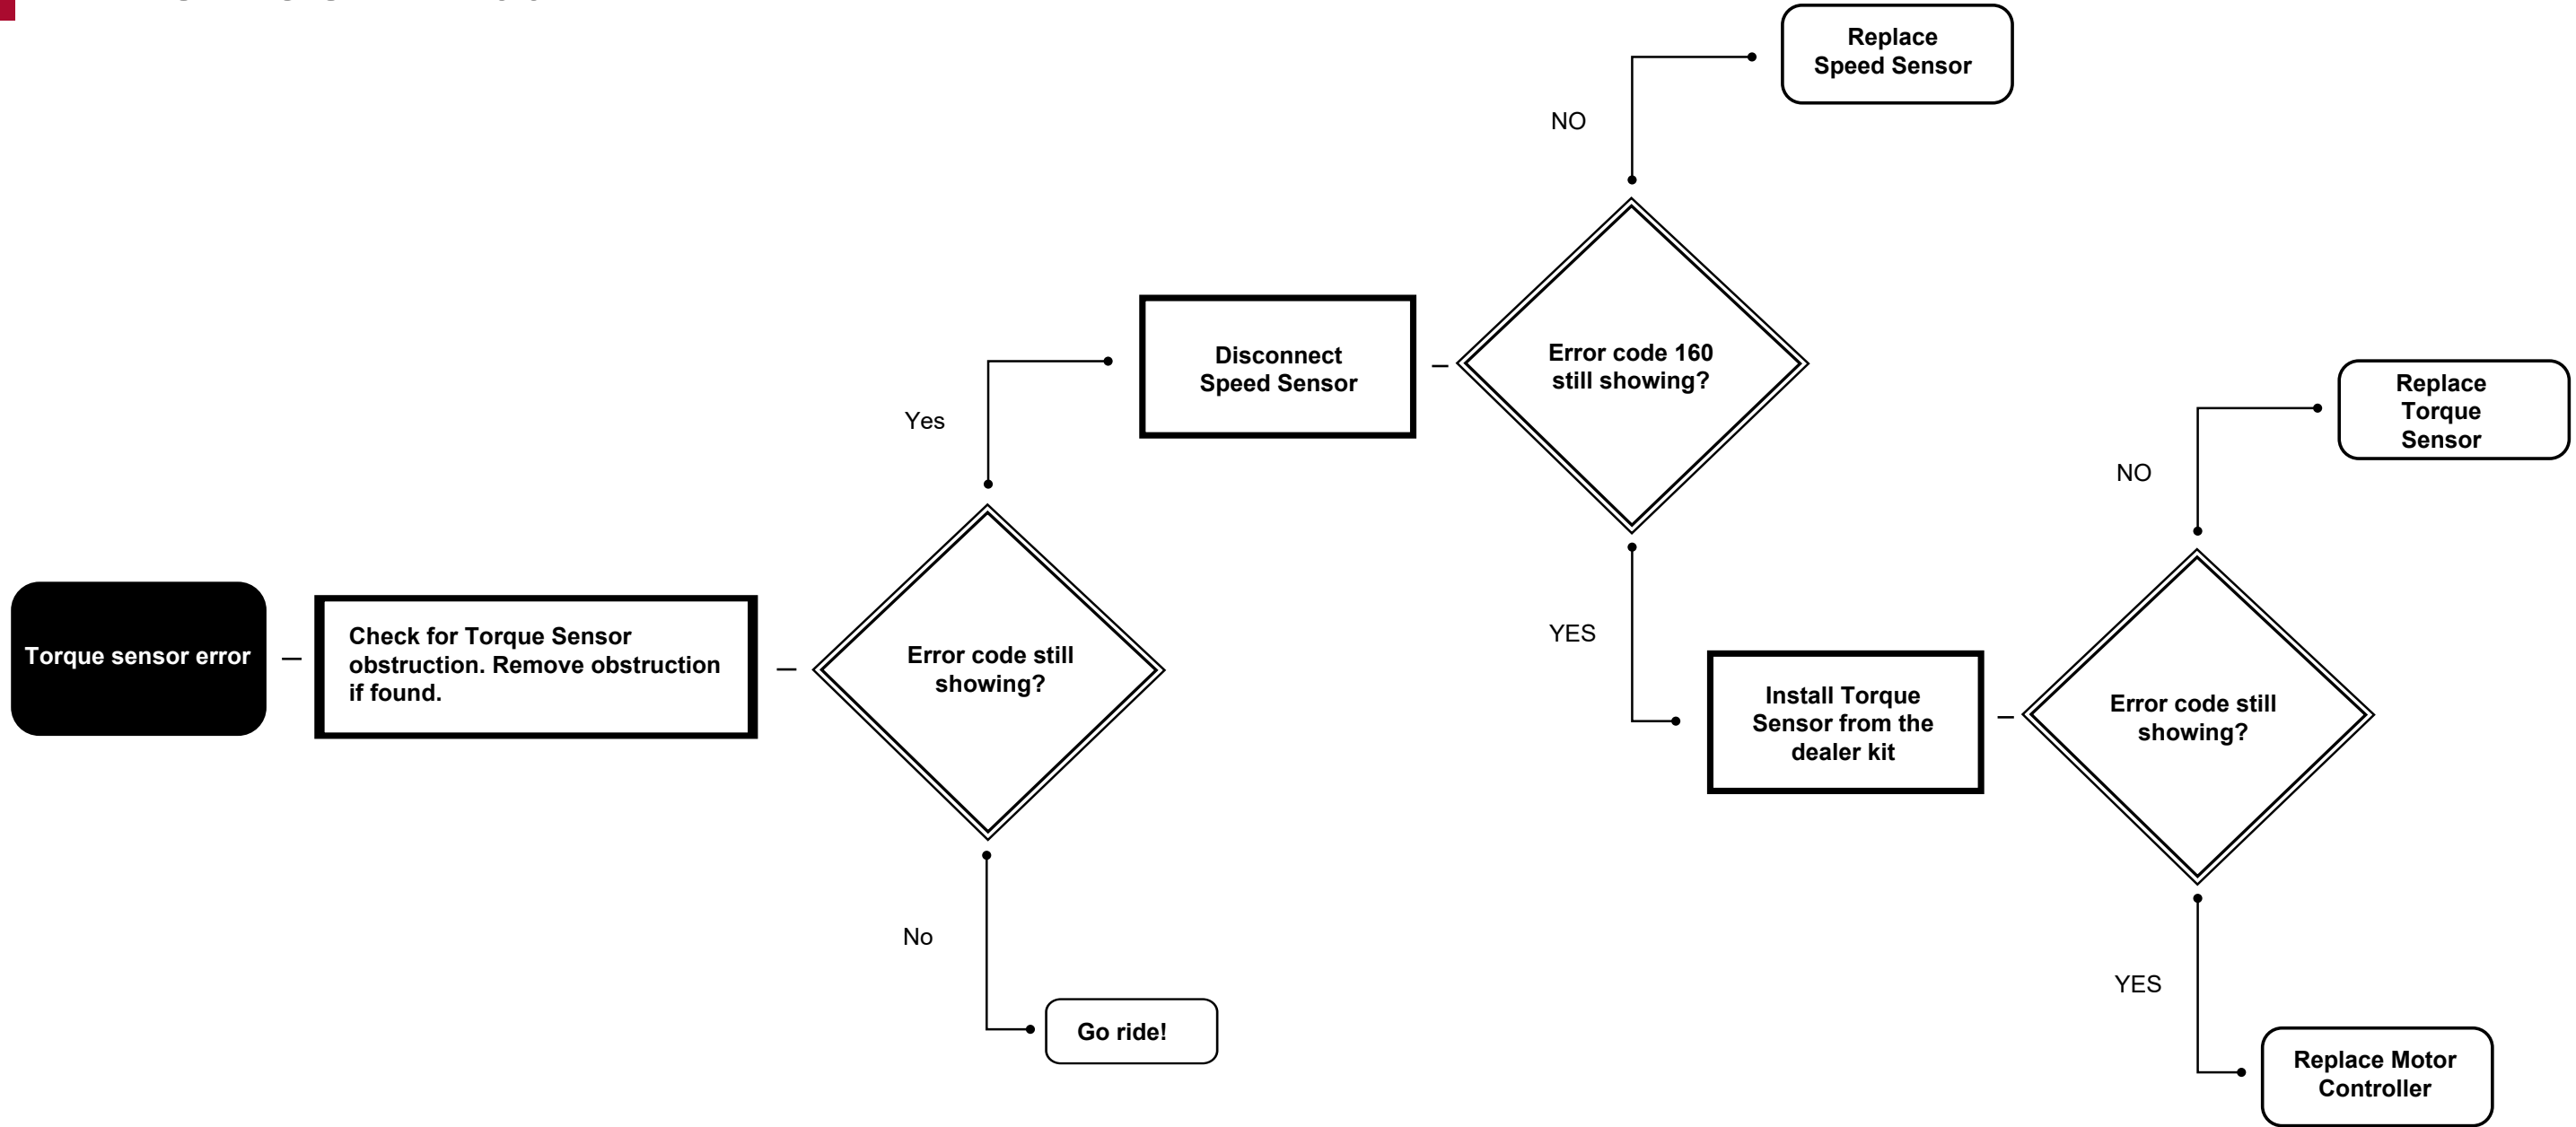


ERROR CODE 180, 189

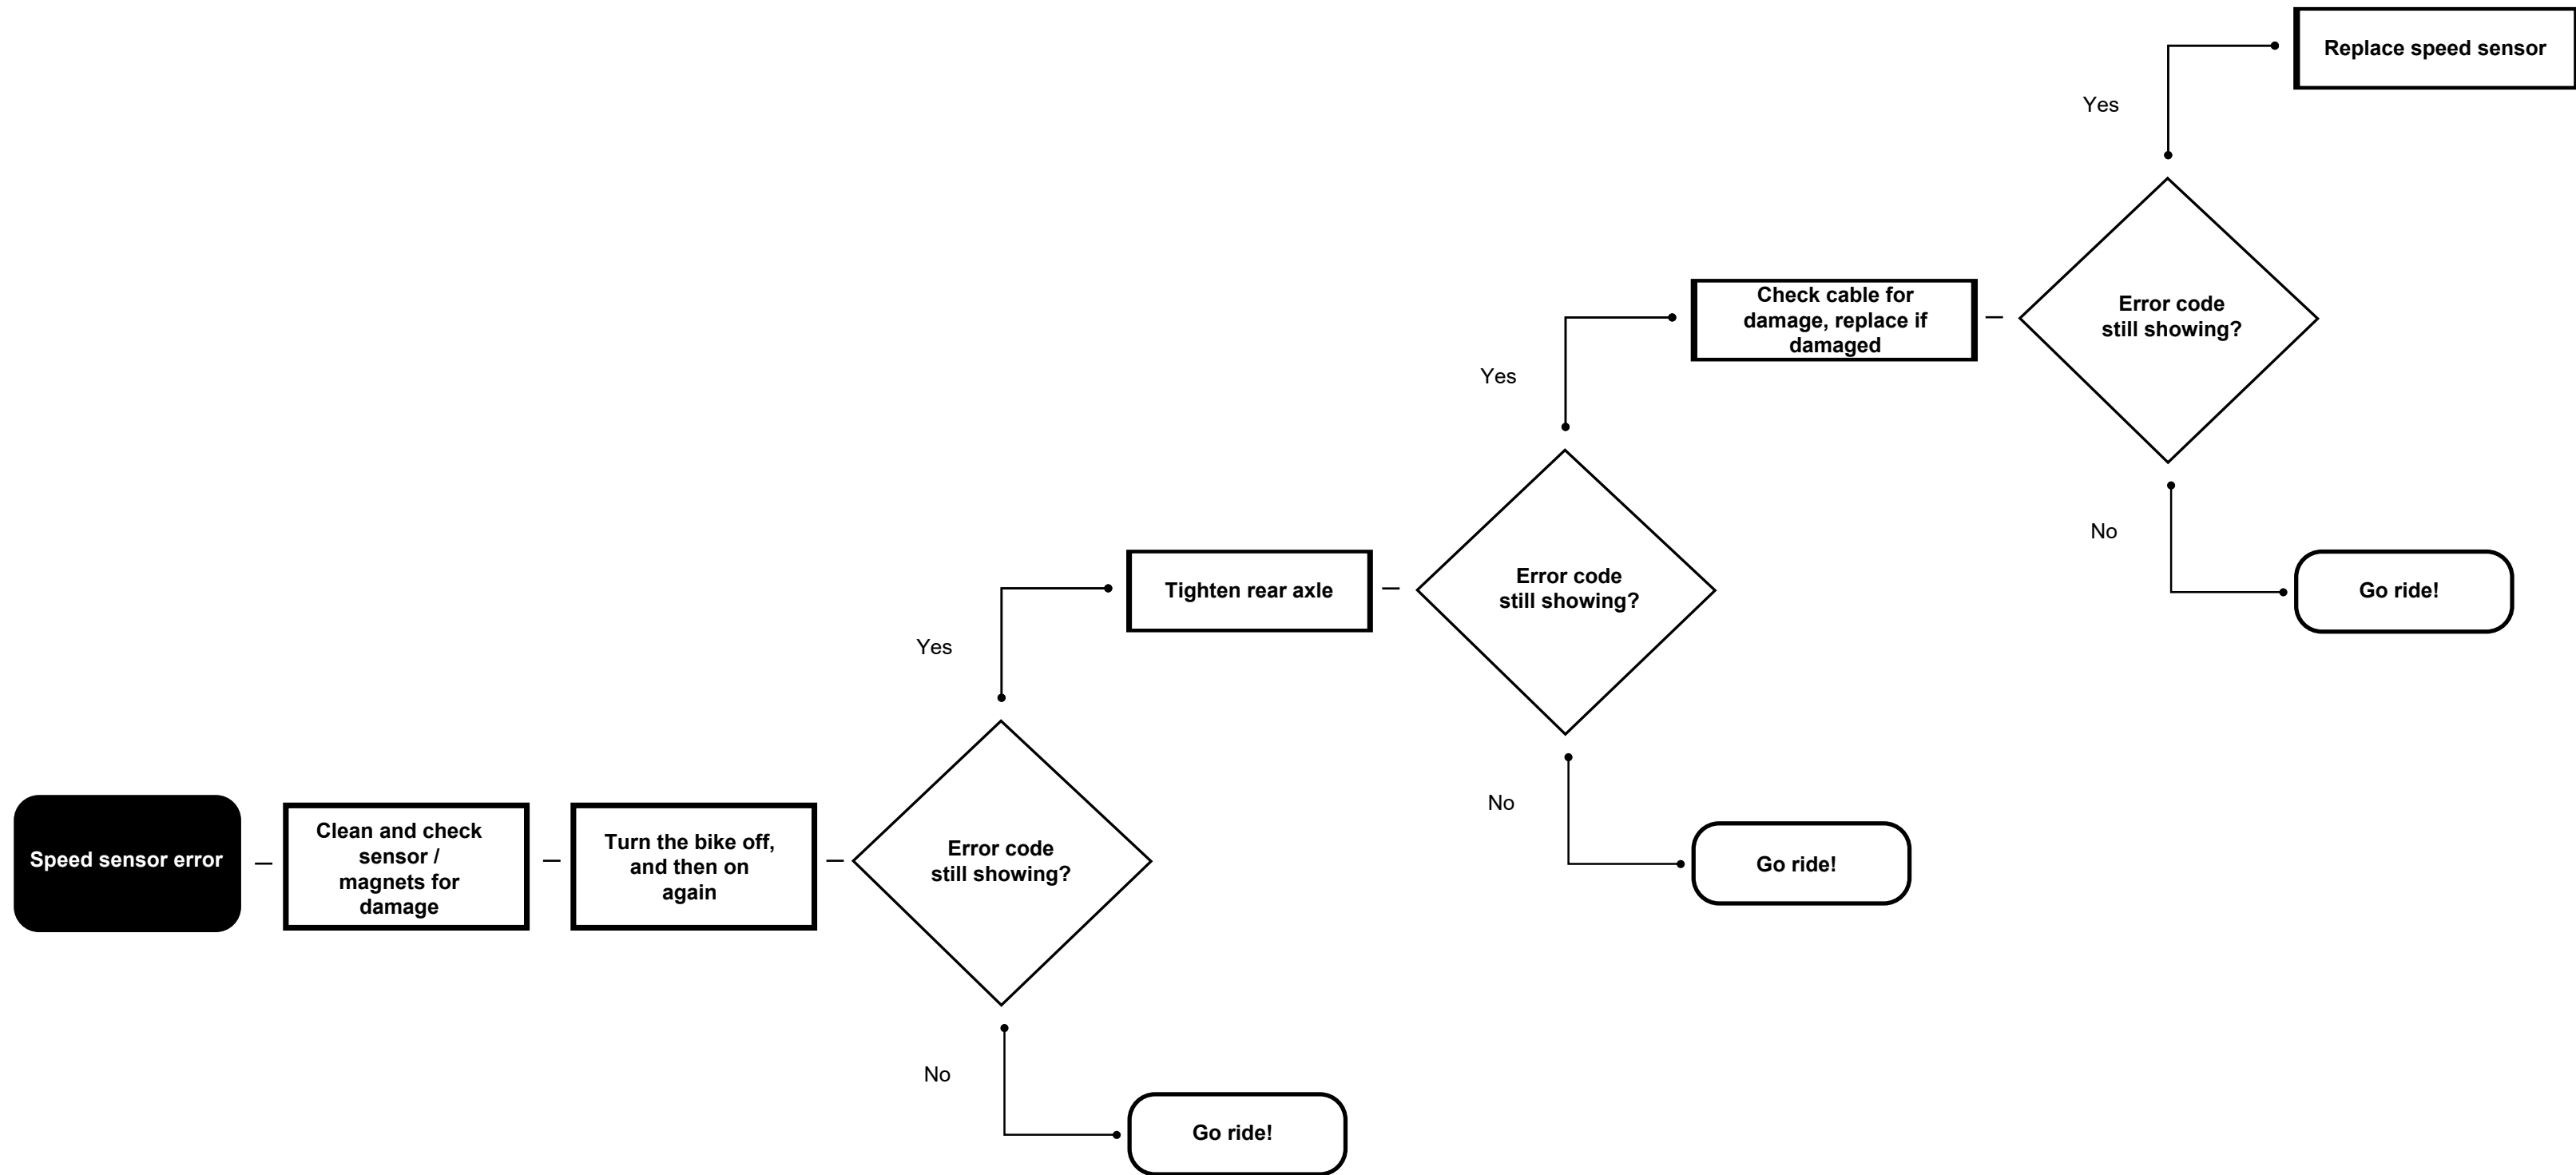


ERROR CODE 199+240

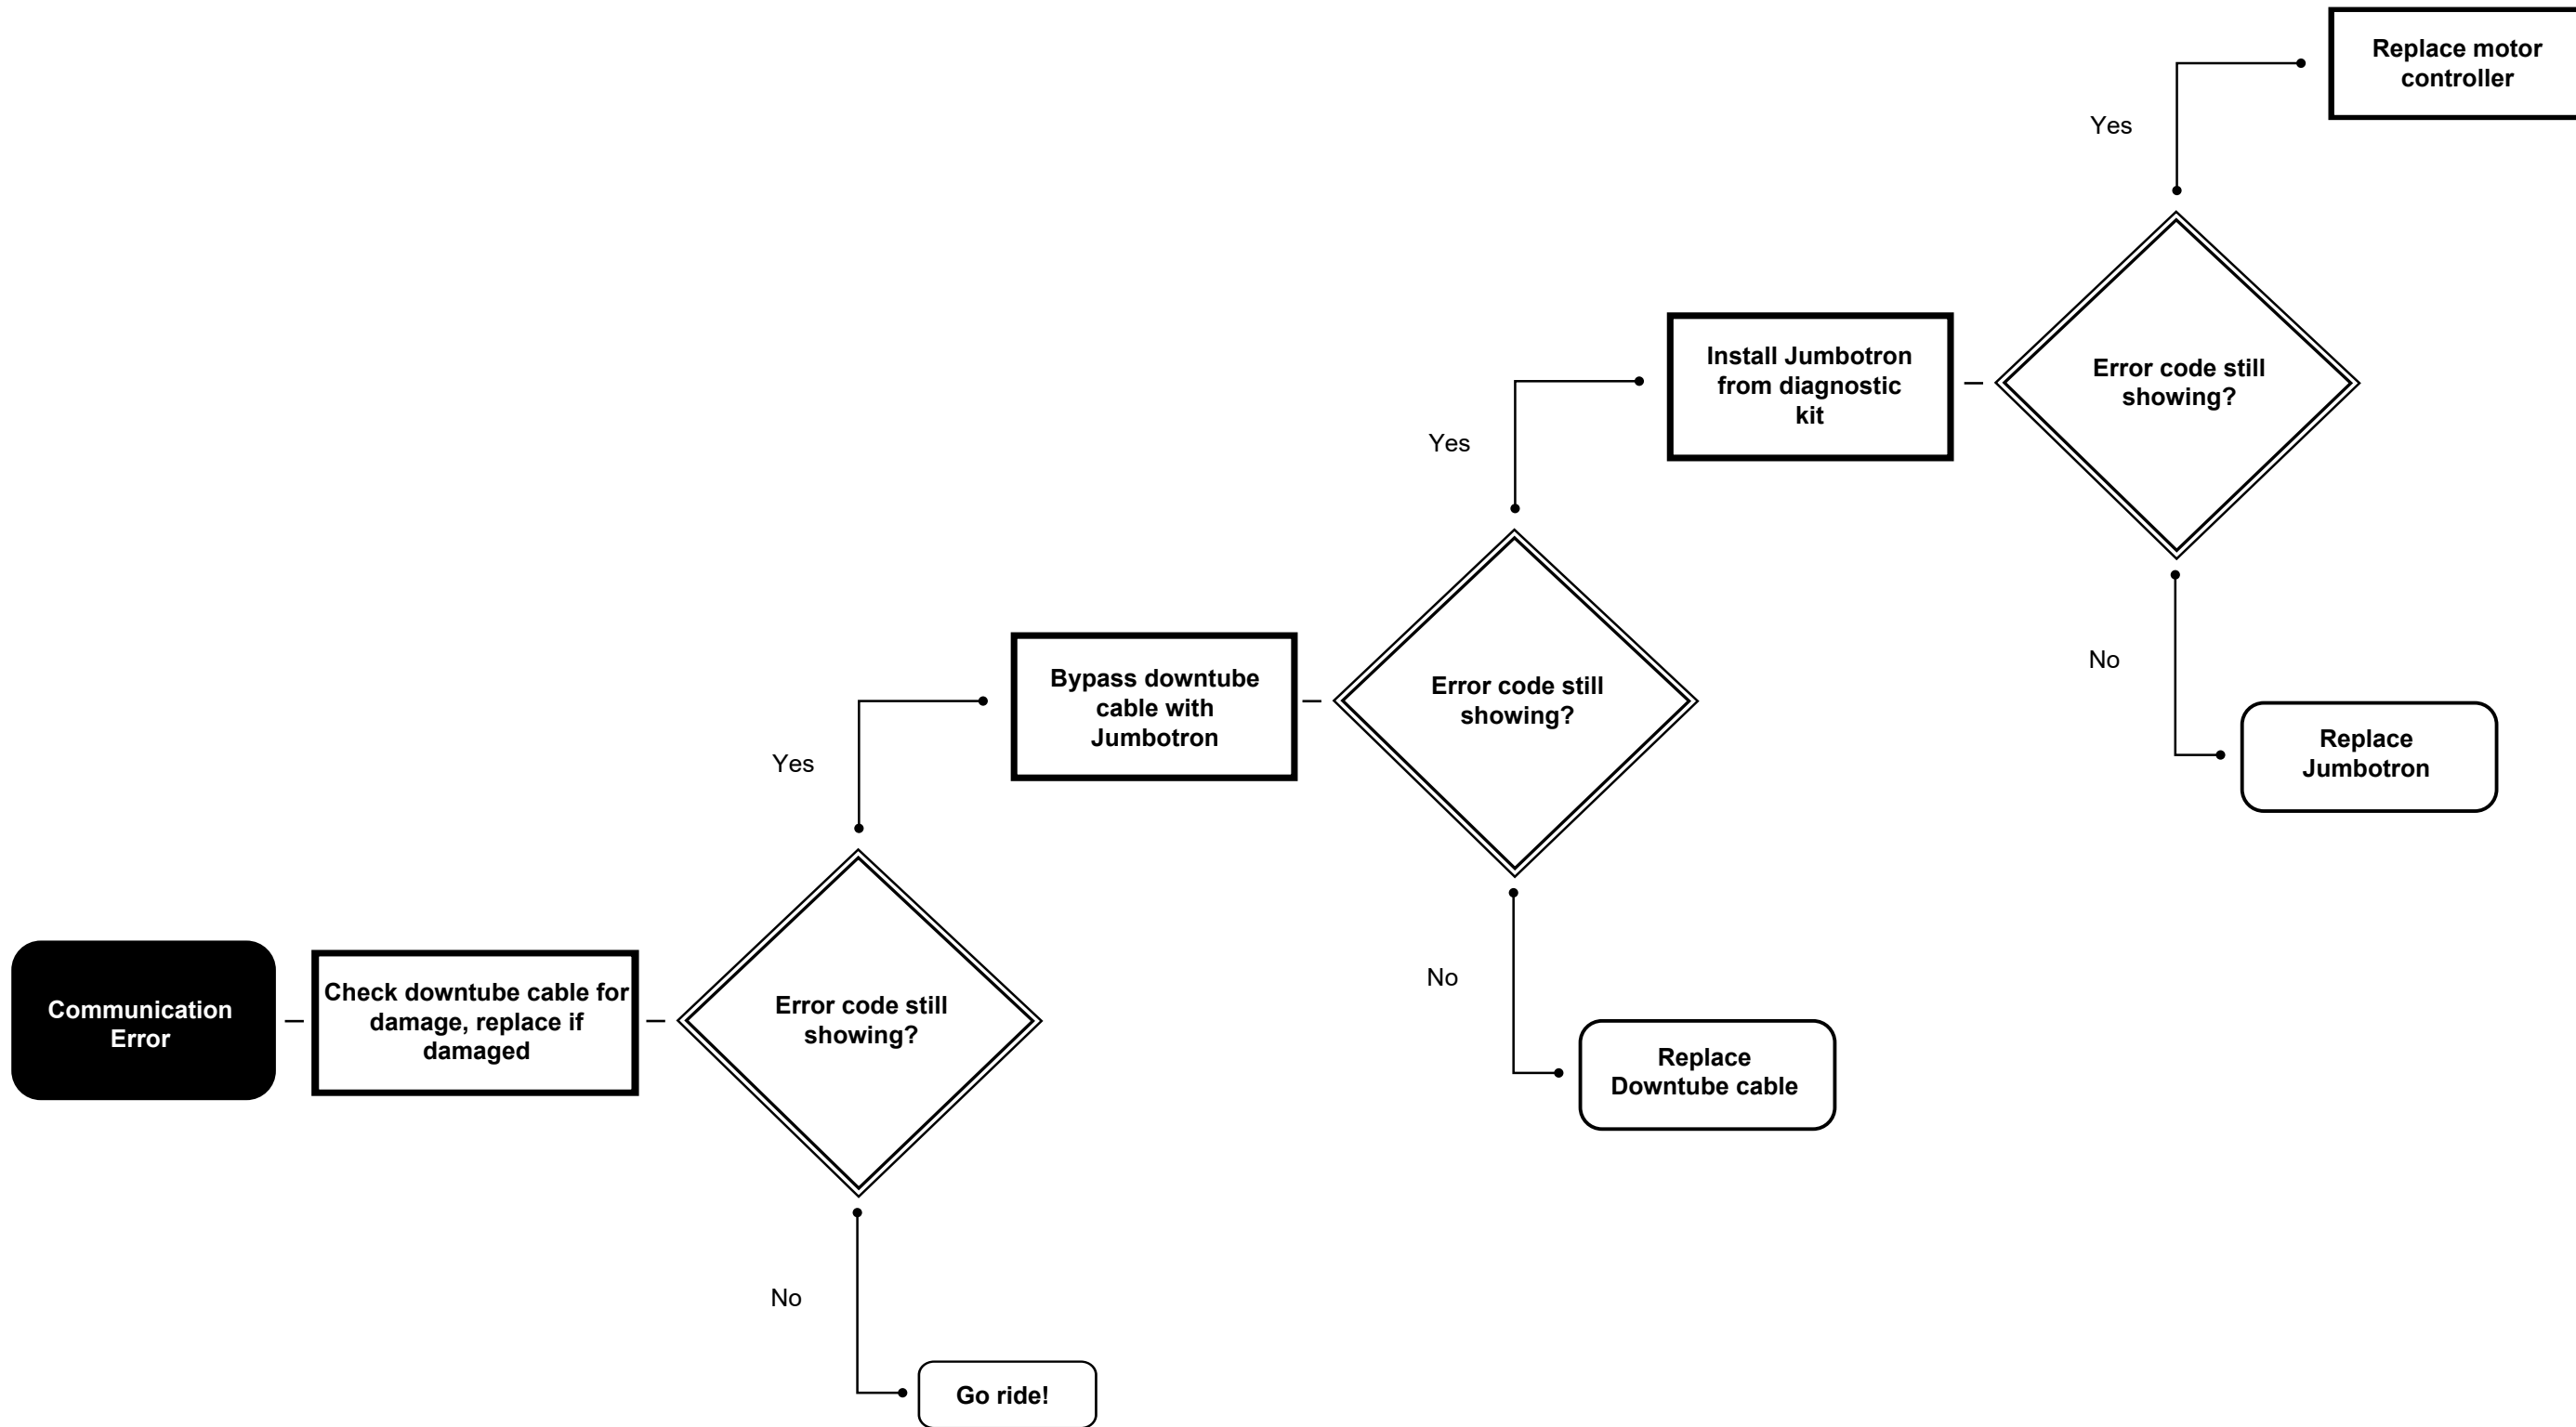


ERROR CODE 201

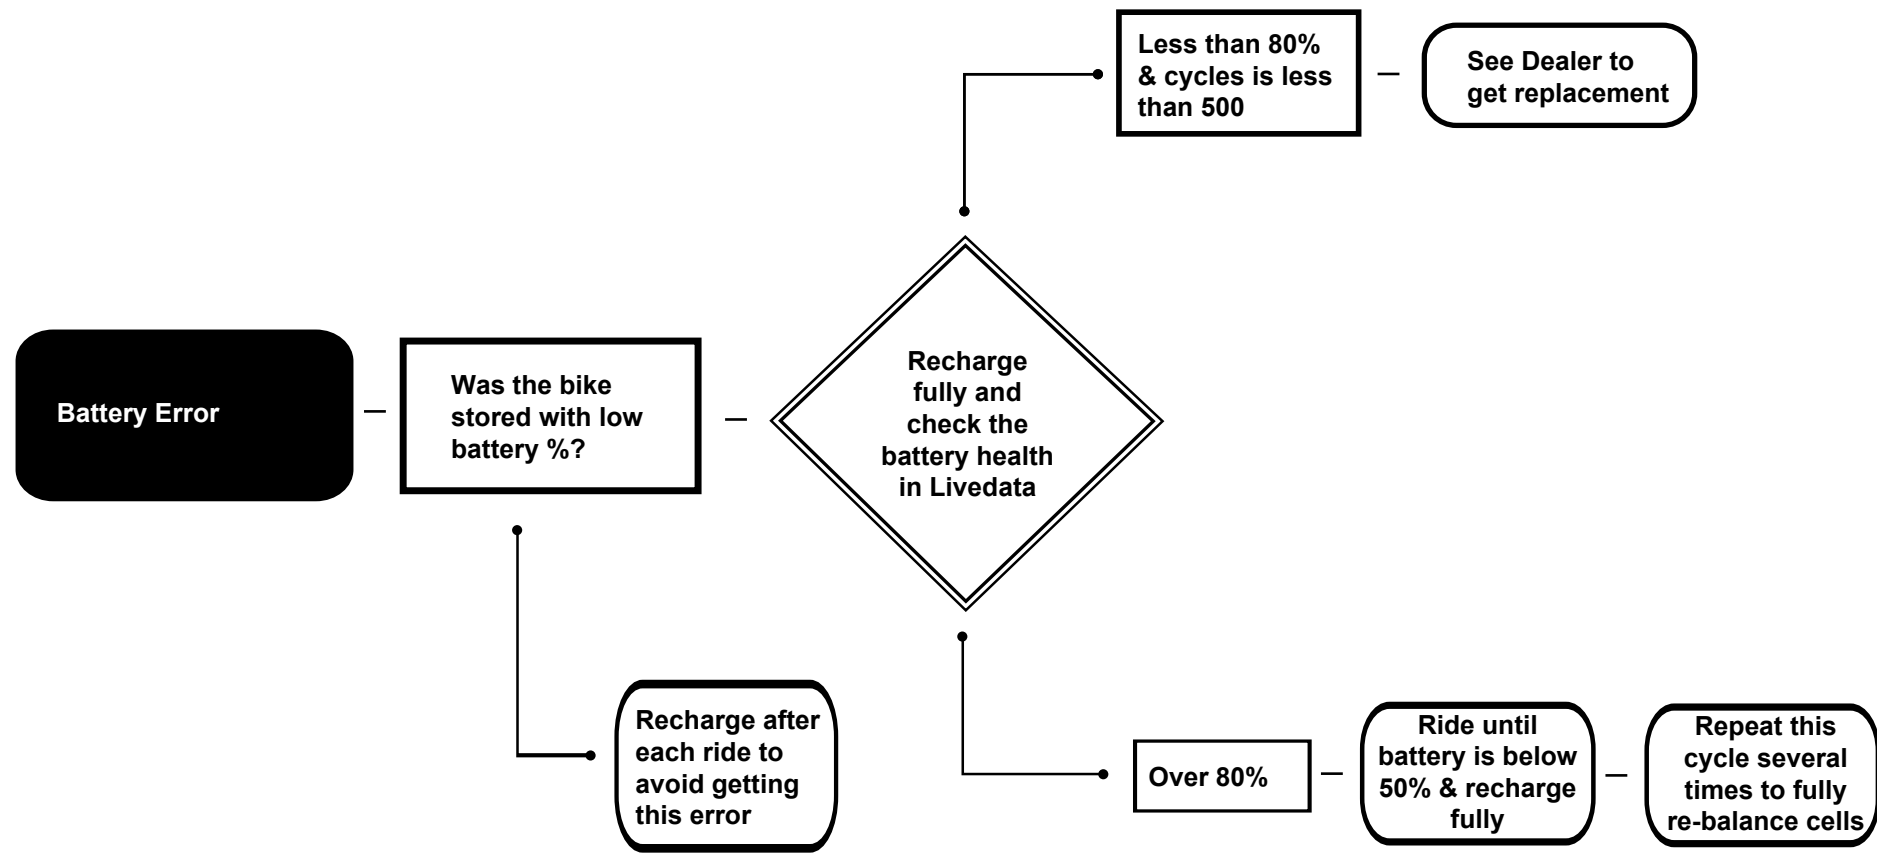


ERROR CODE 220

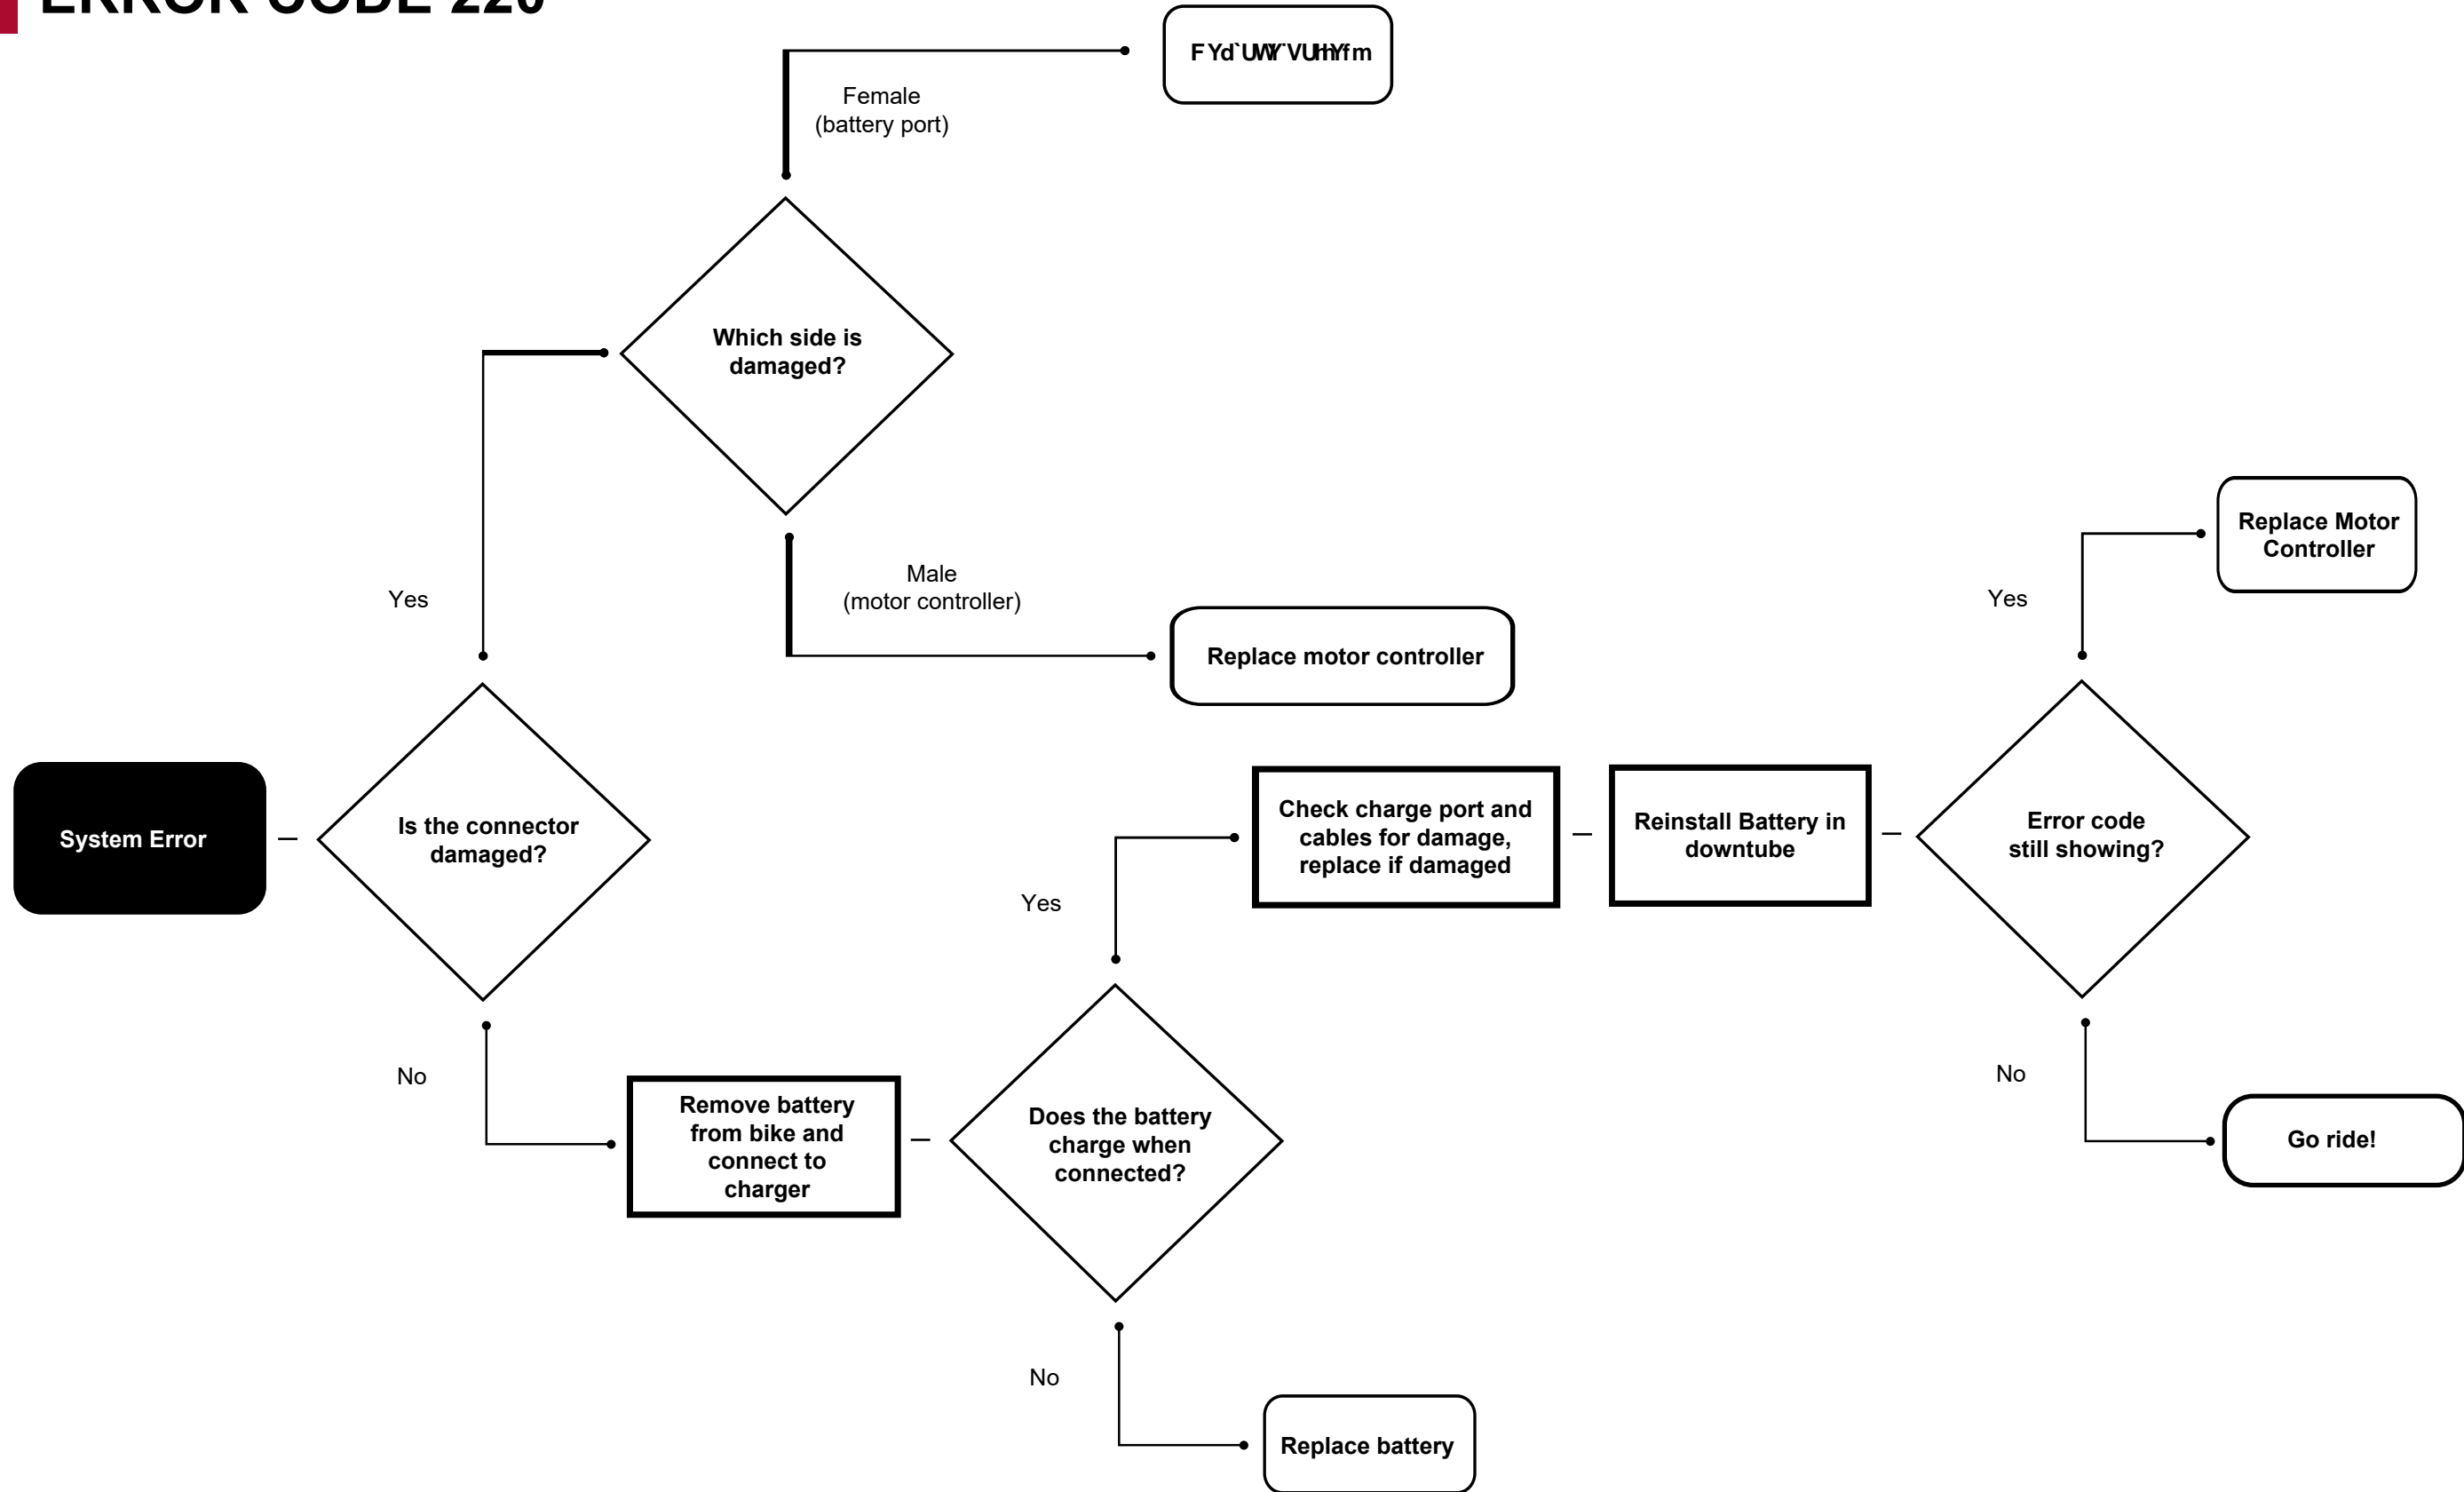


ERROR CODE 230

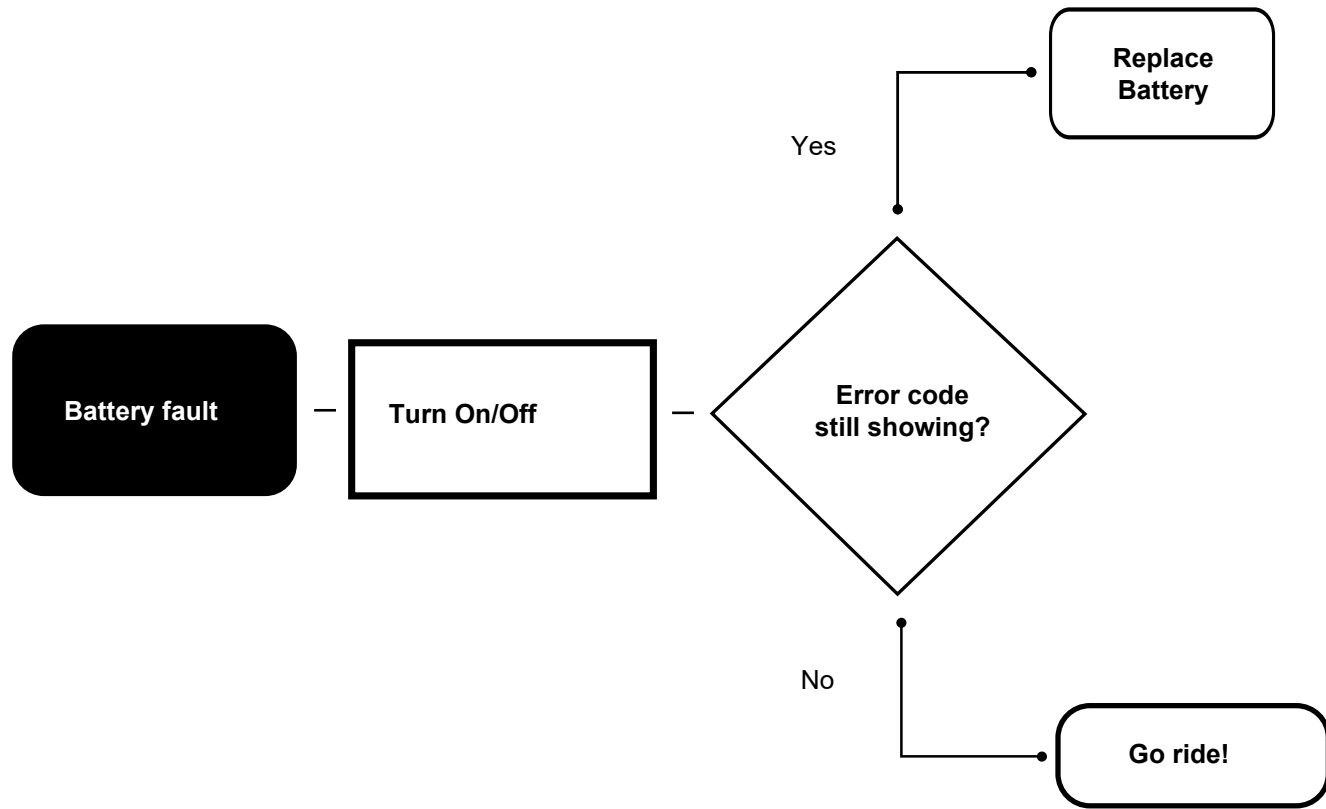


ERROR CODE 240

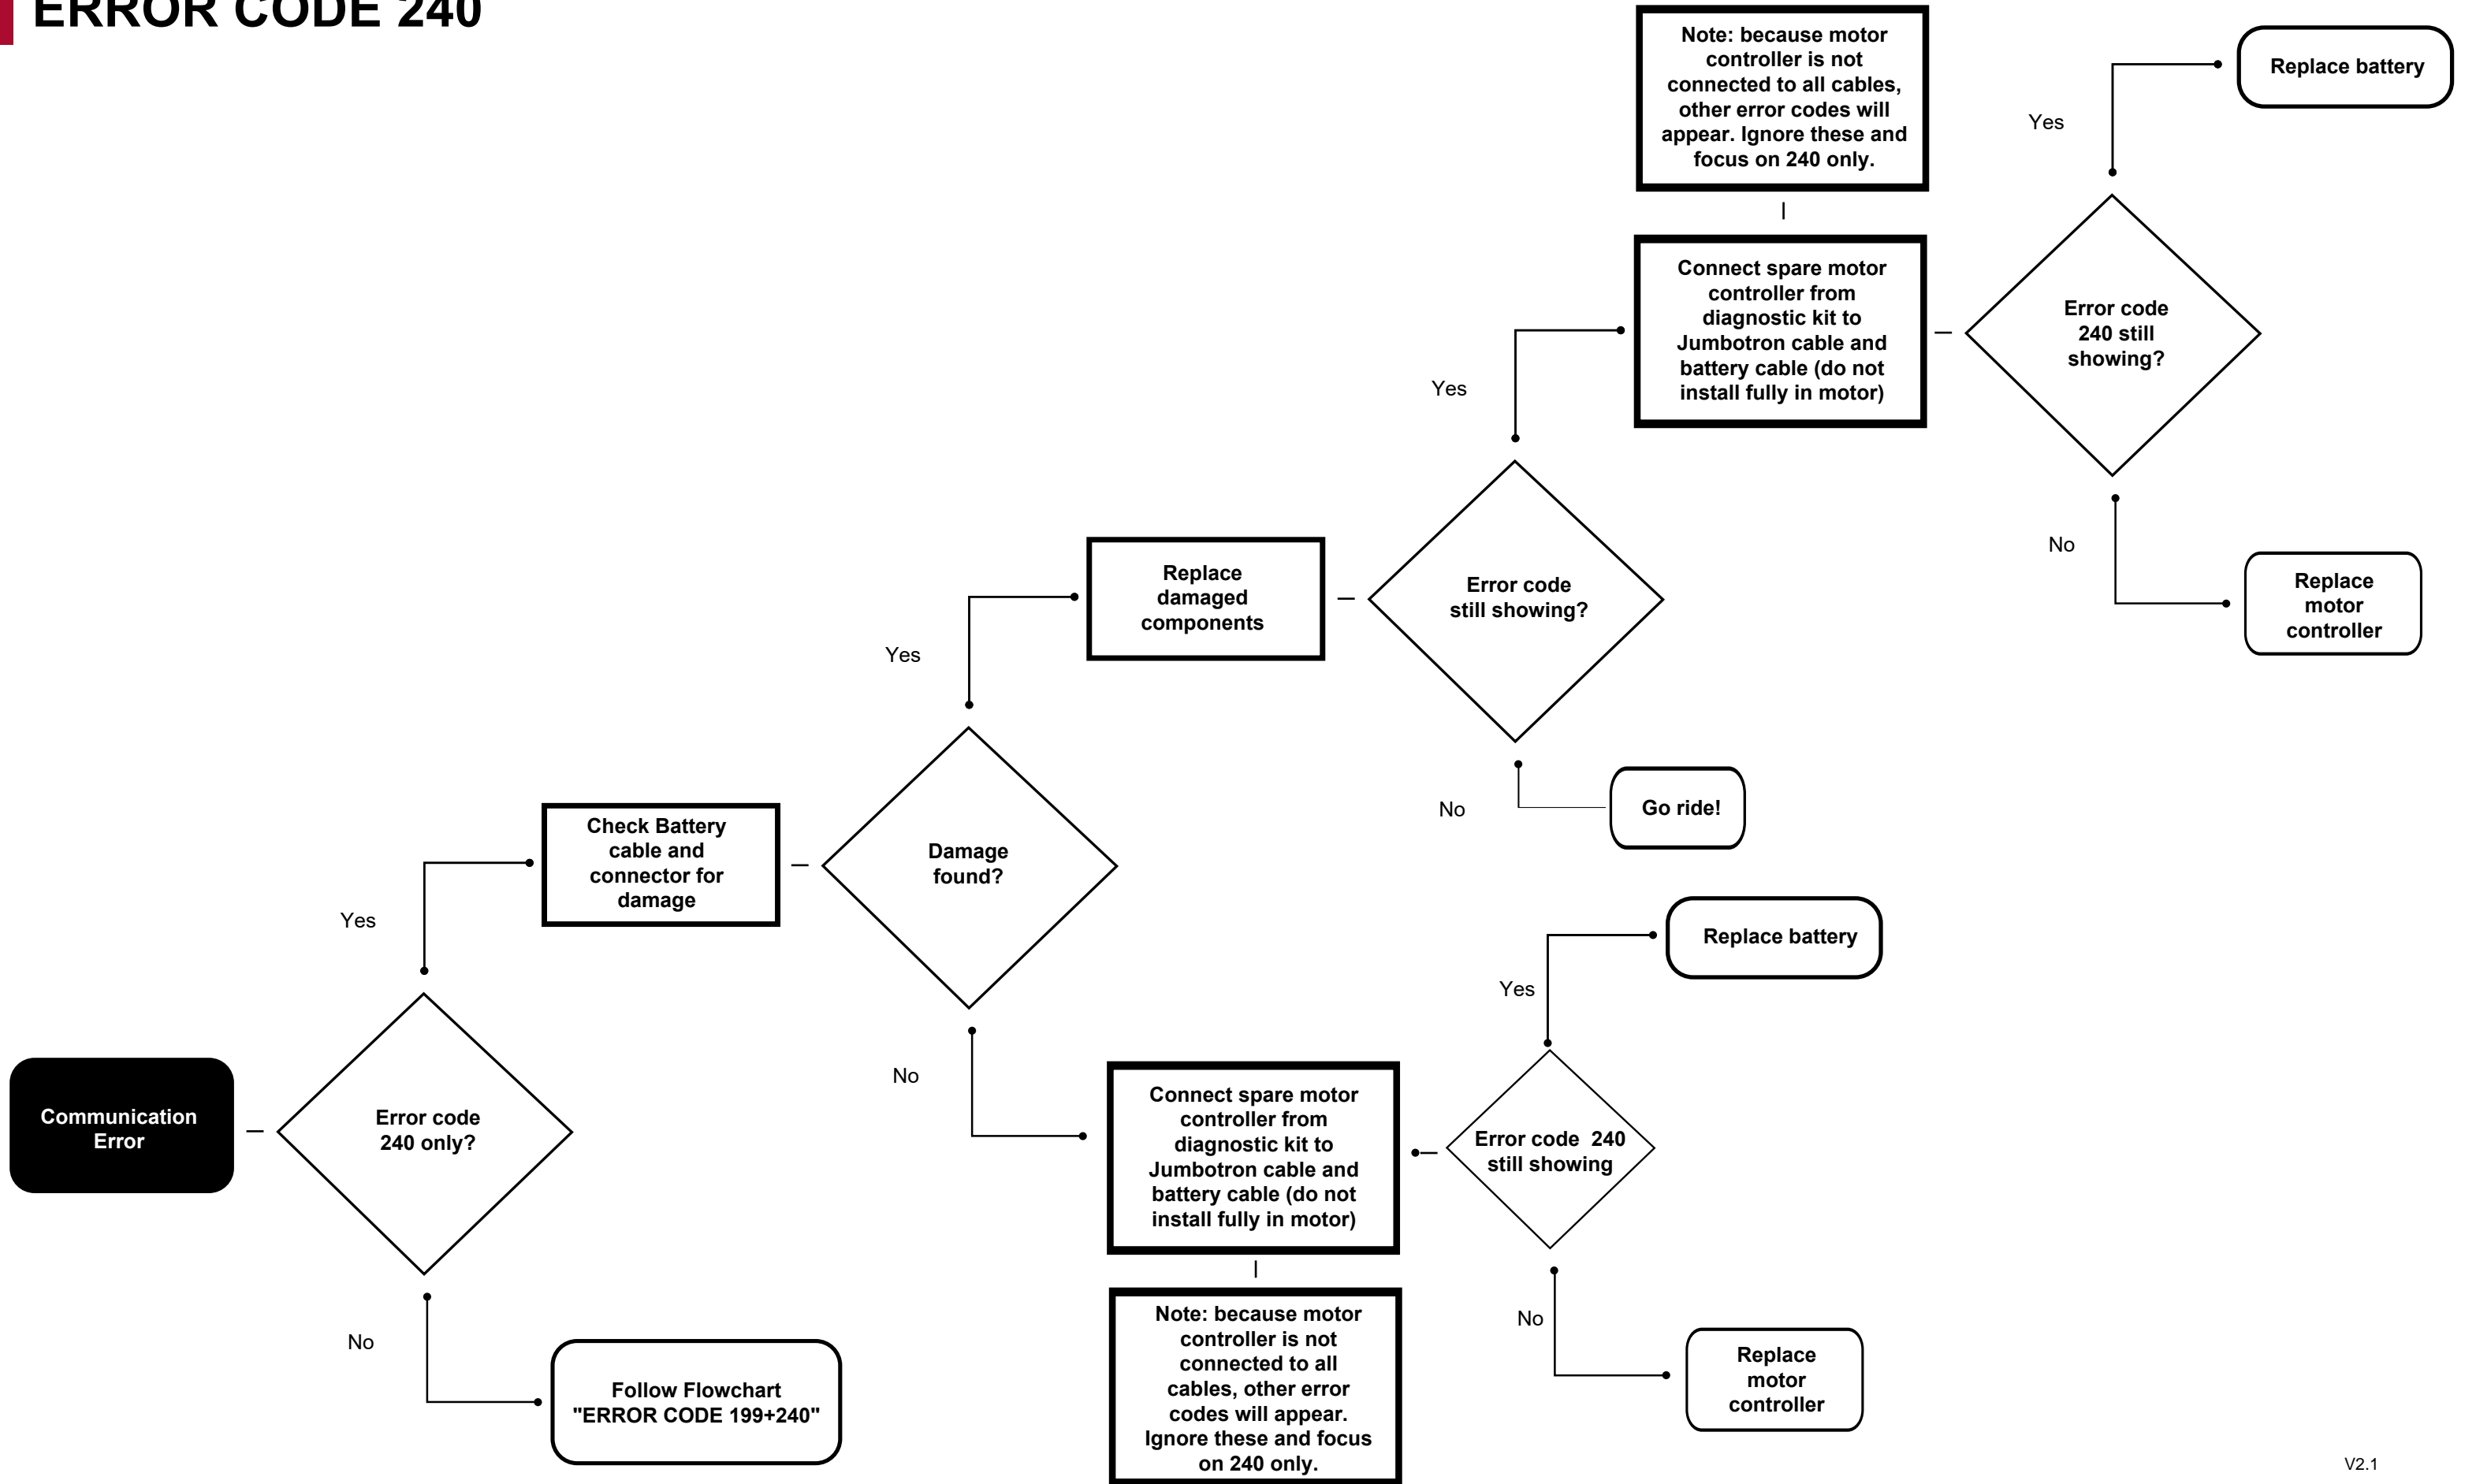


Battery not charging

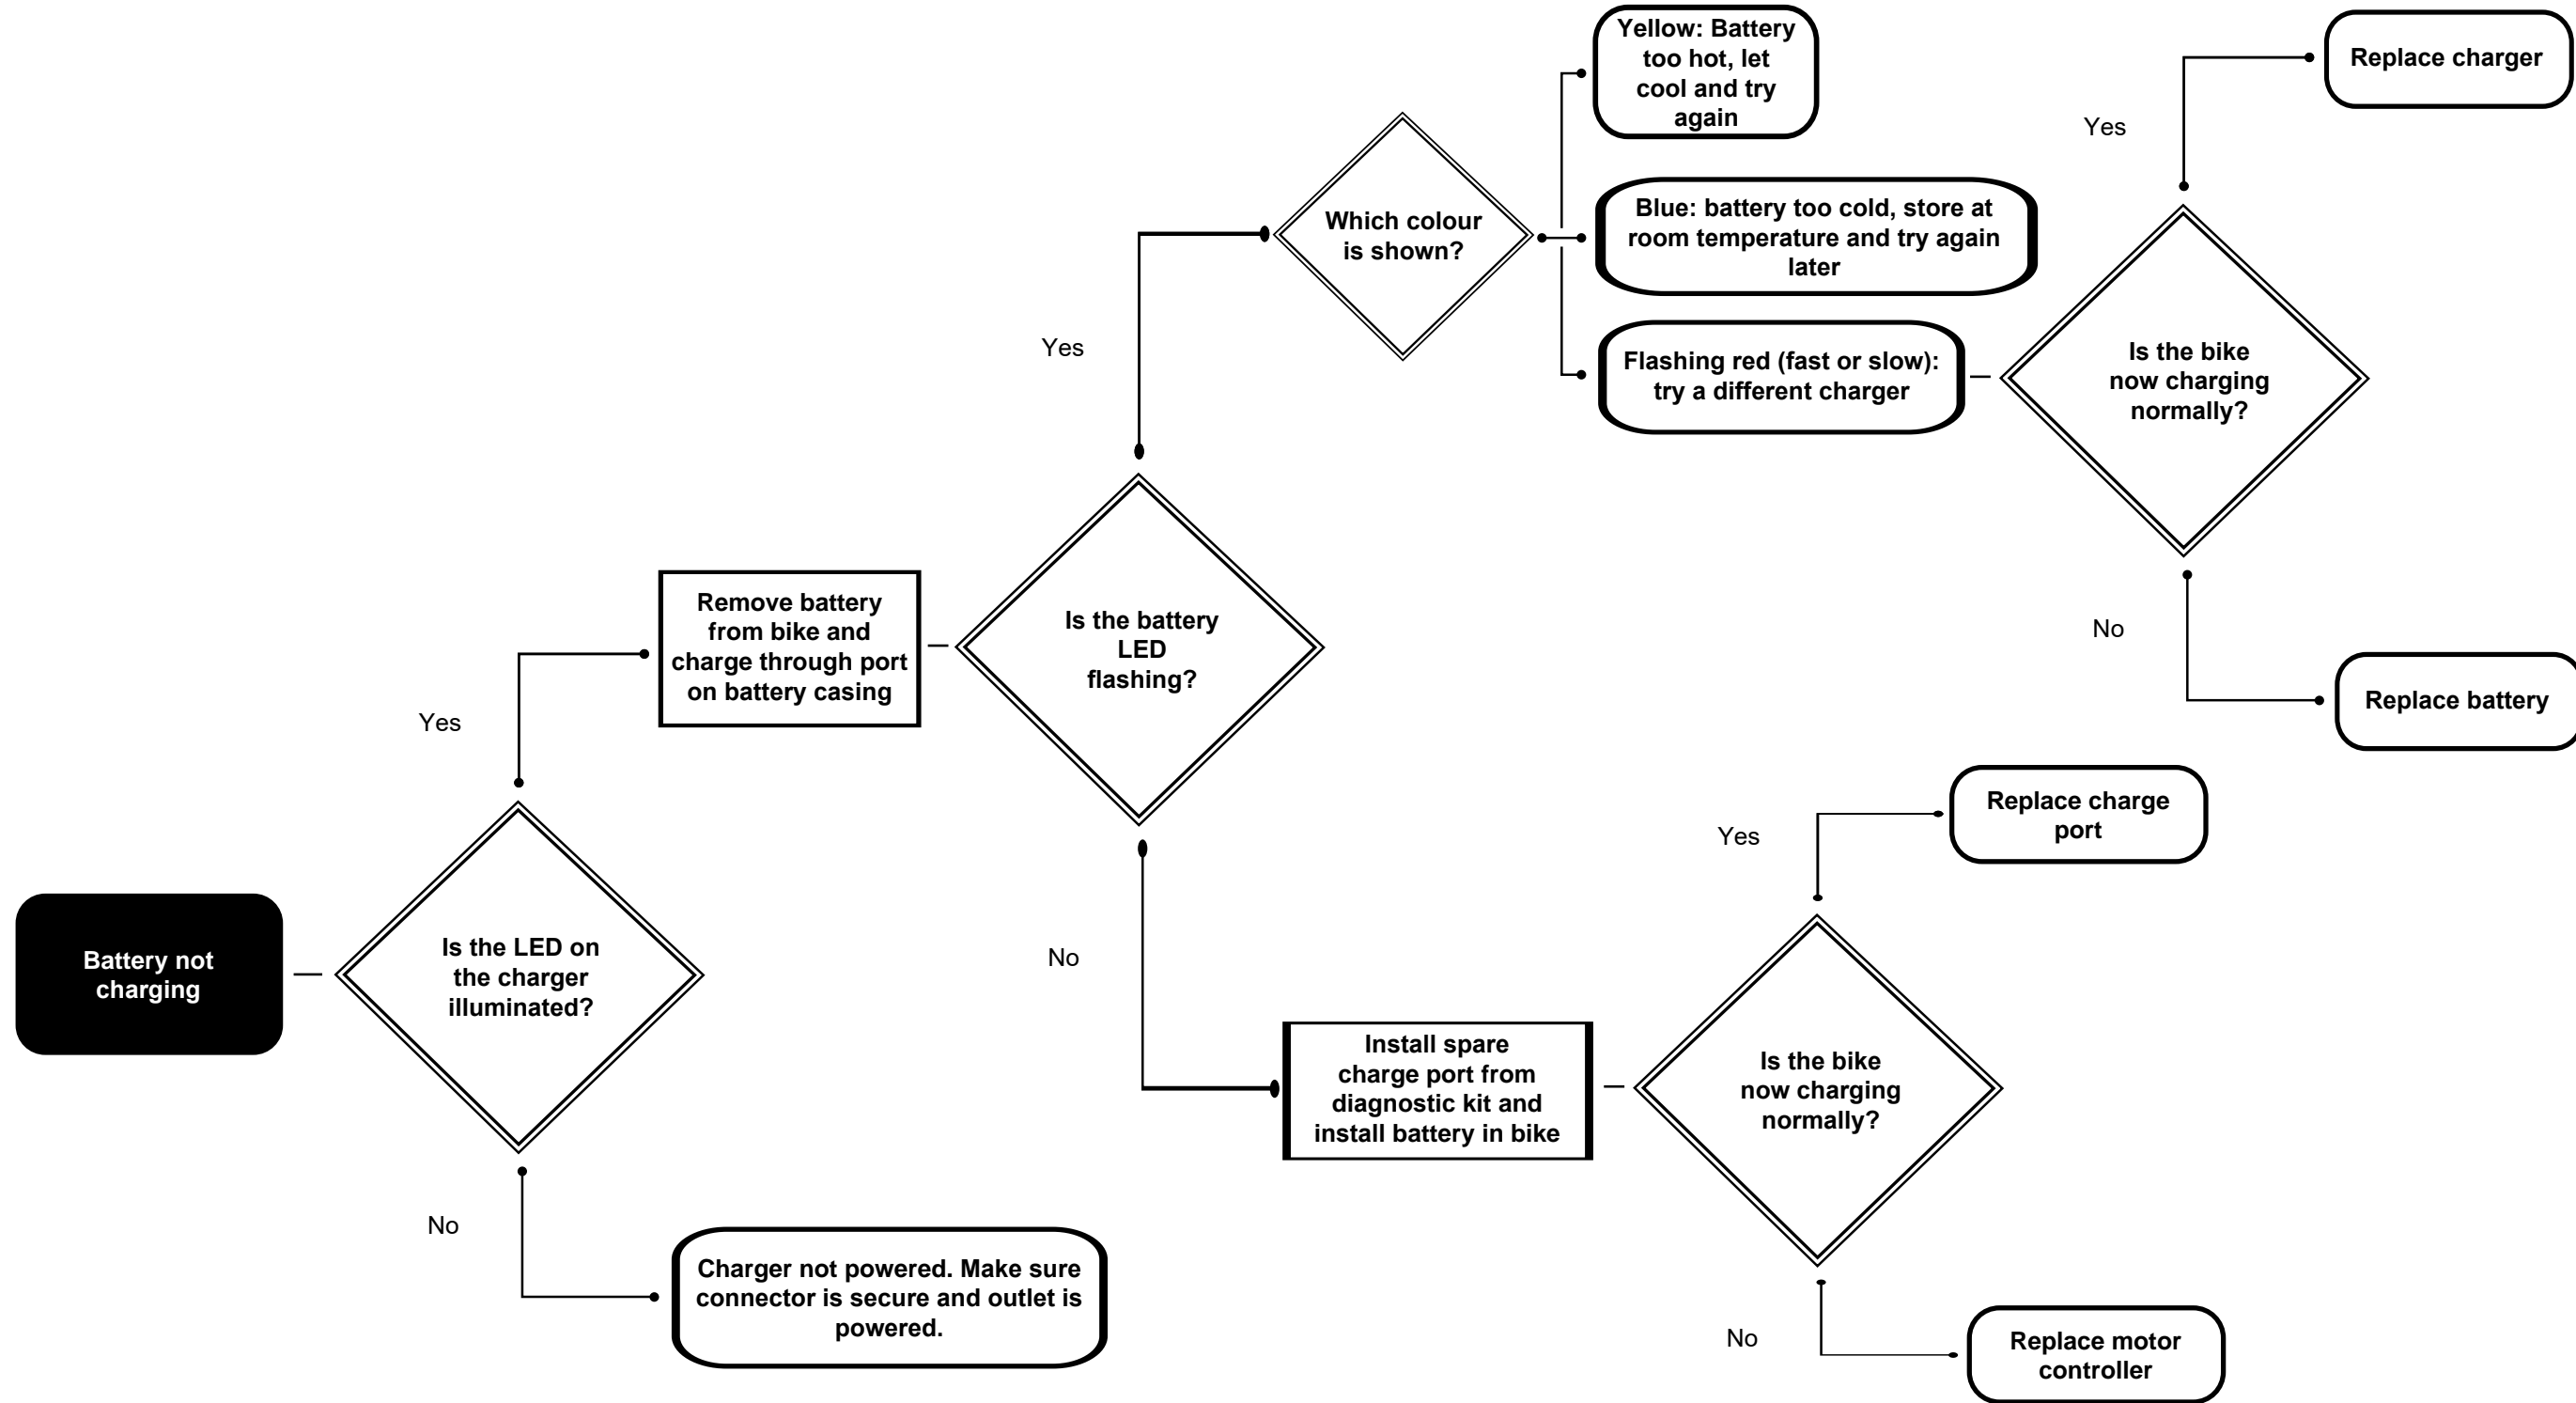


Grinding / knocking sounds

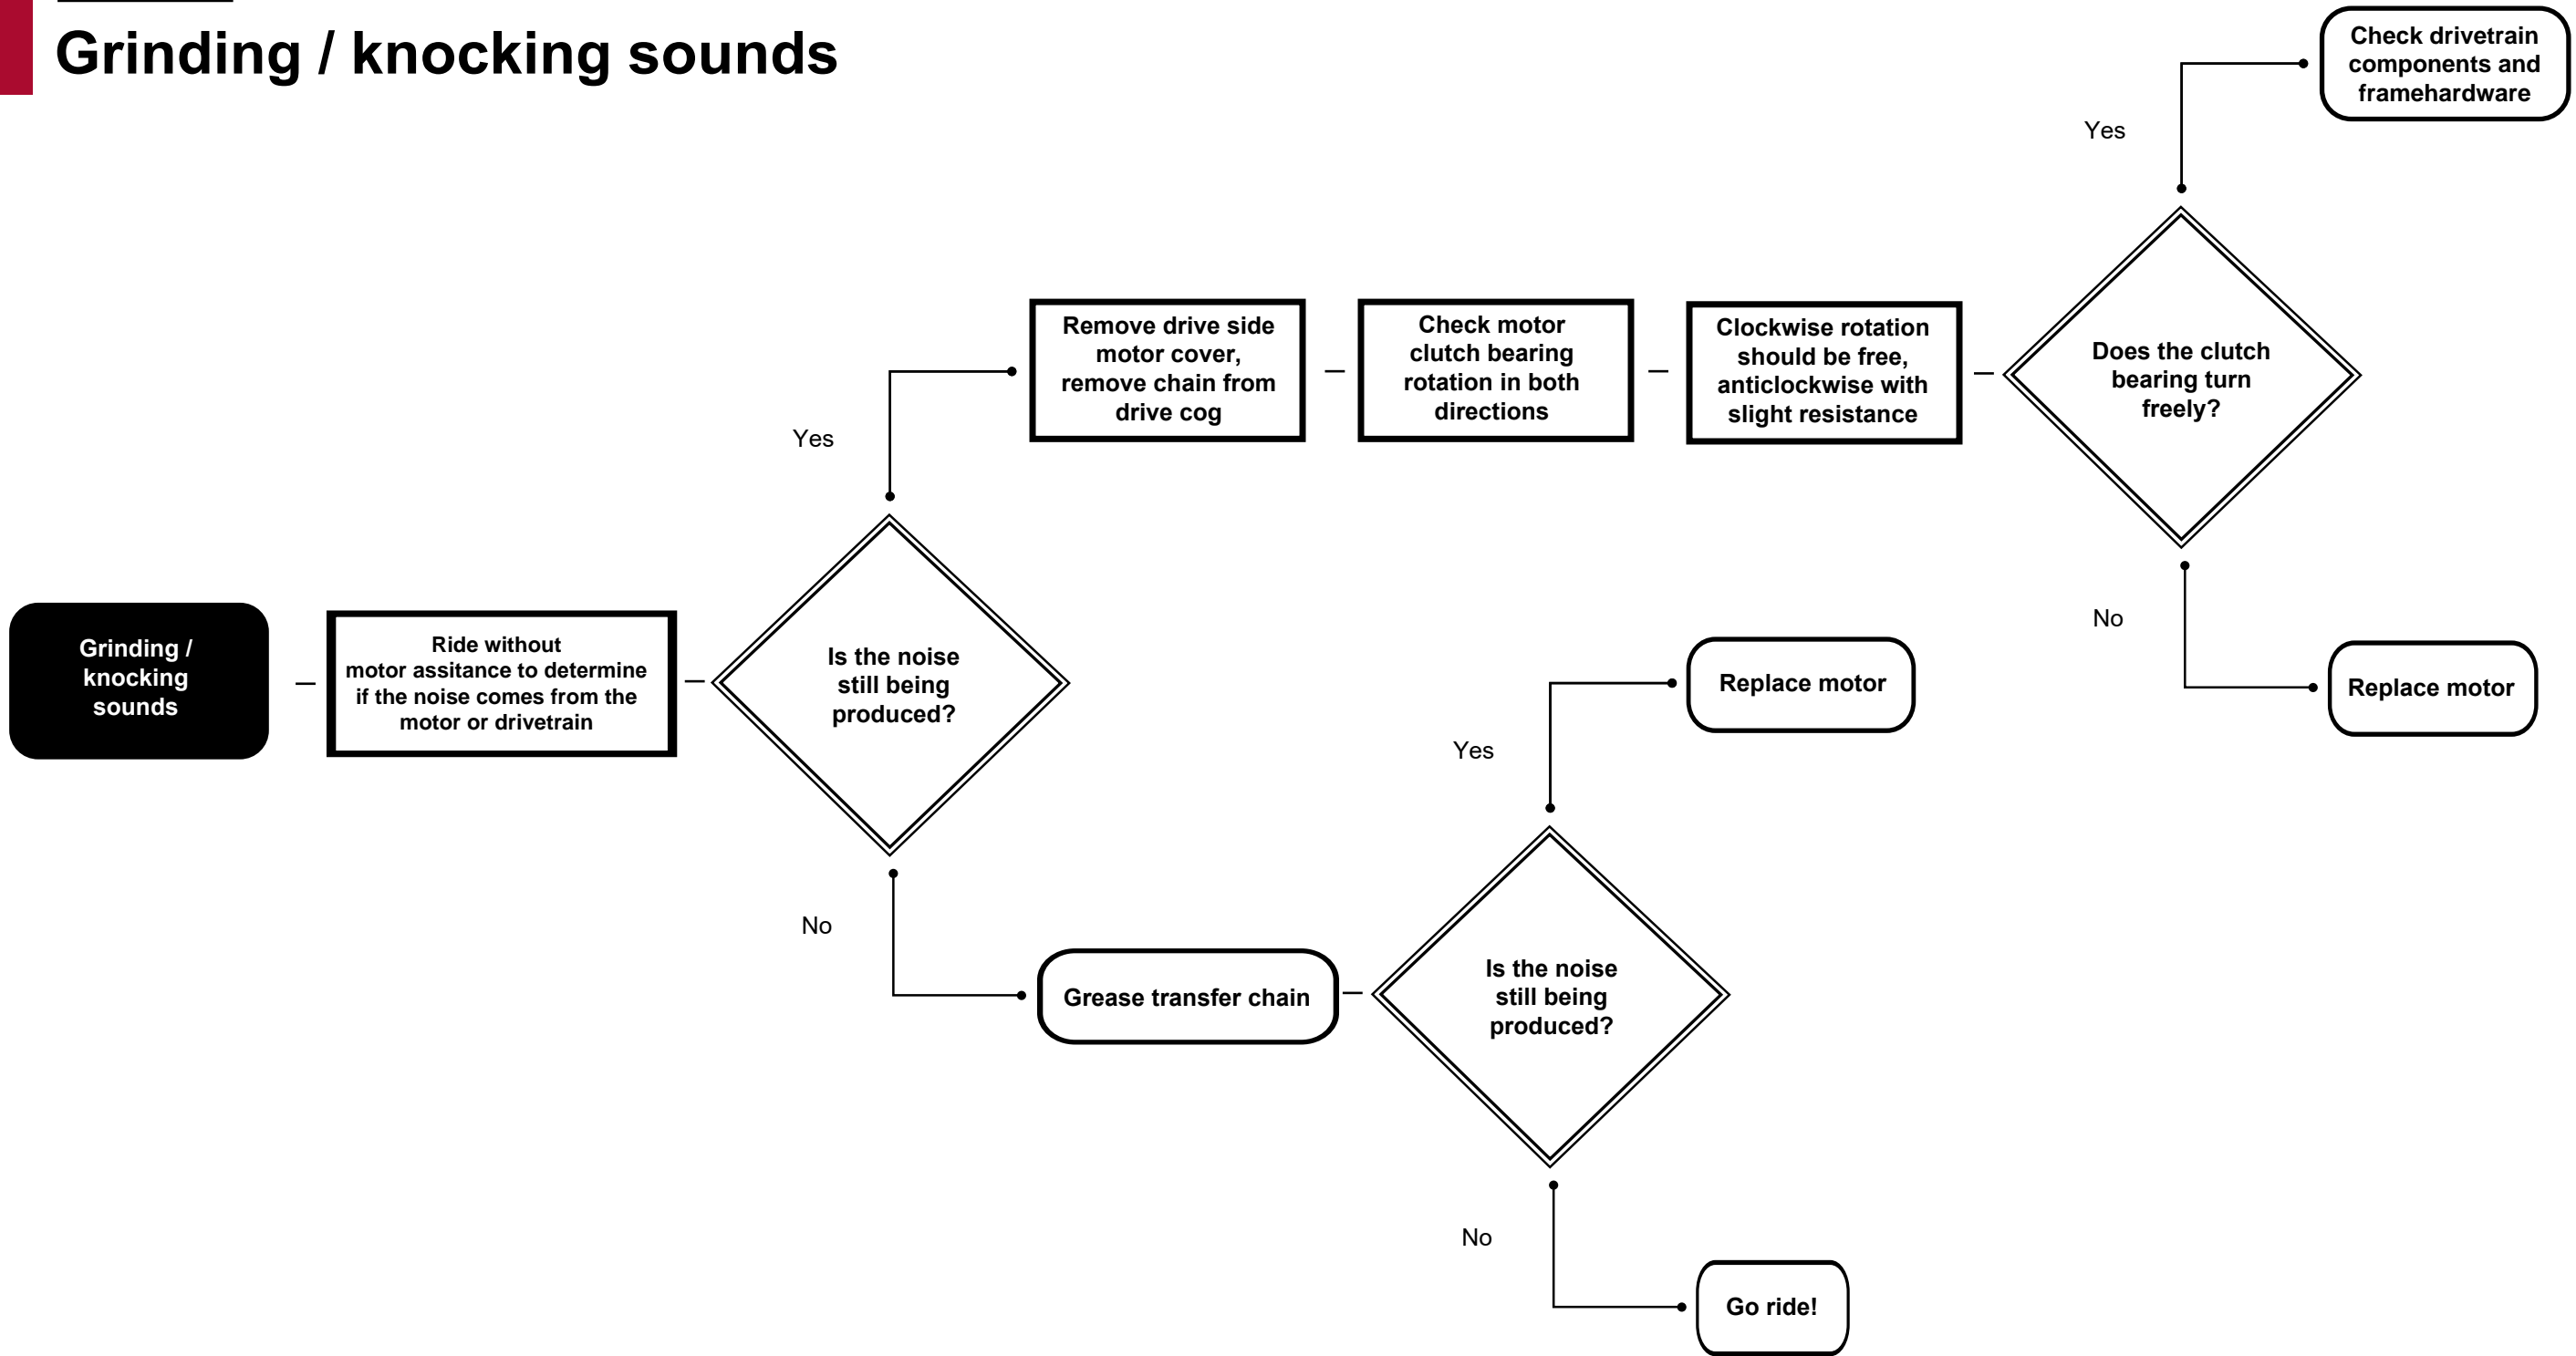


Jumbotron doesn't turn on, no motor assistance

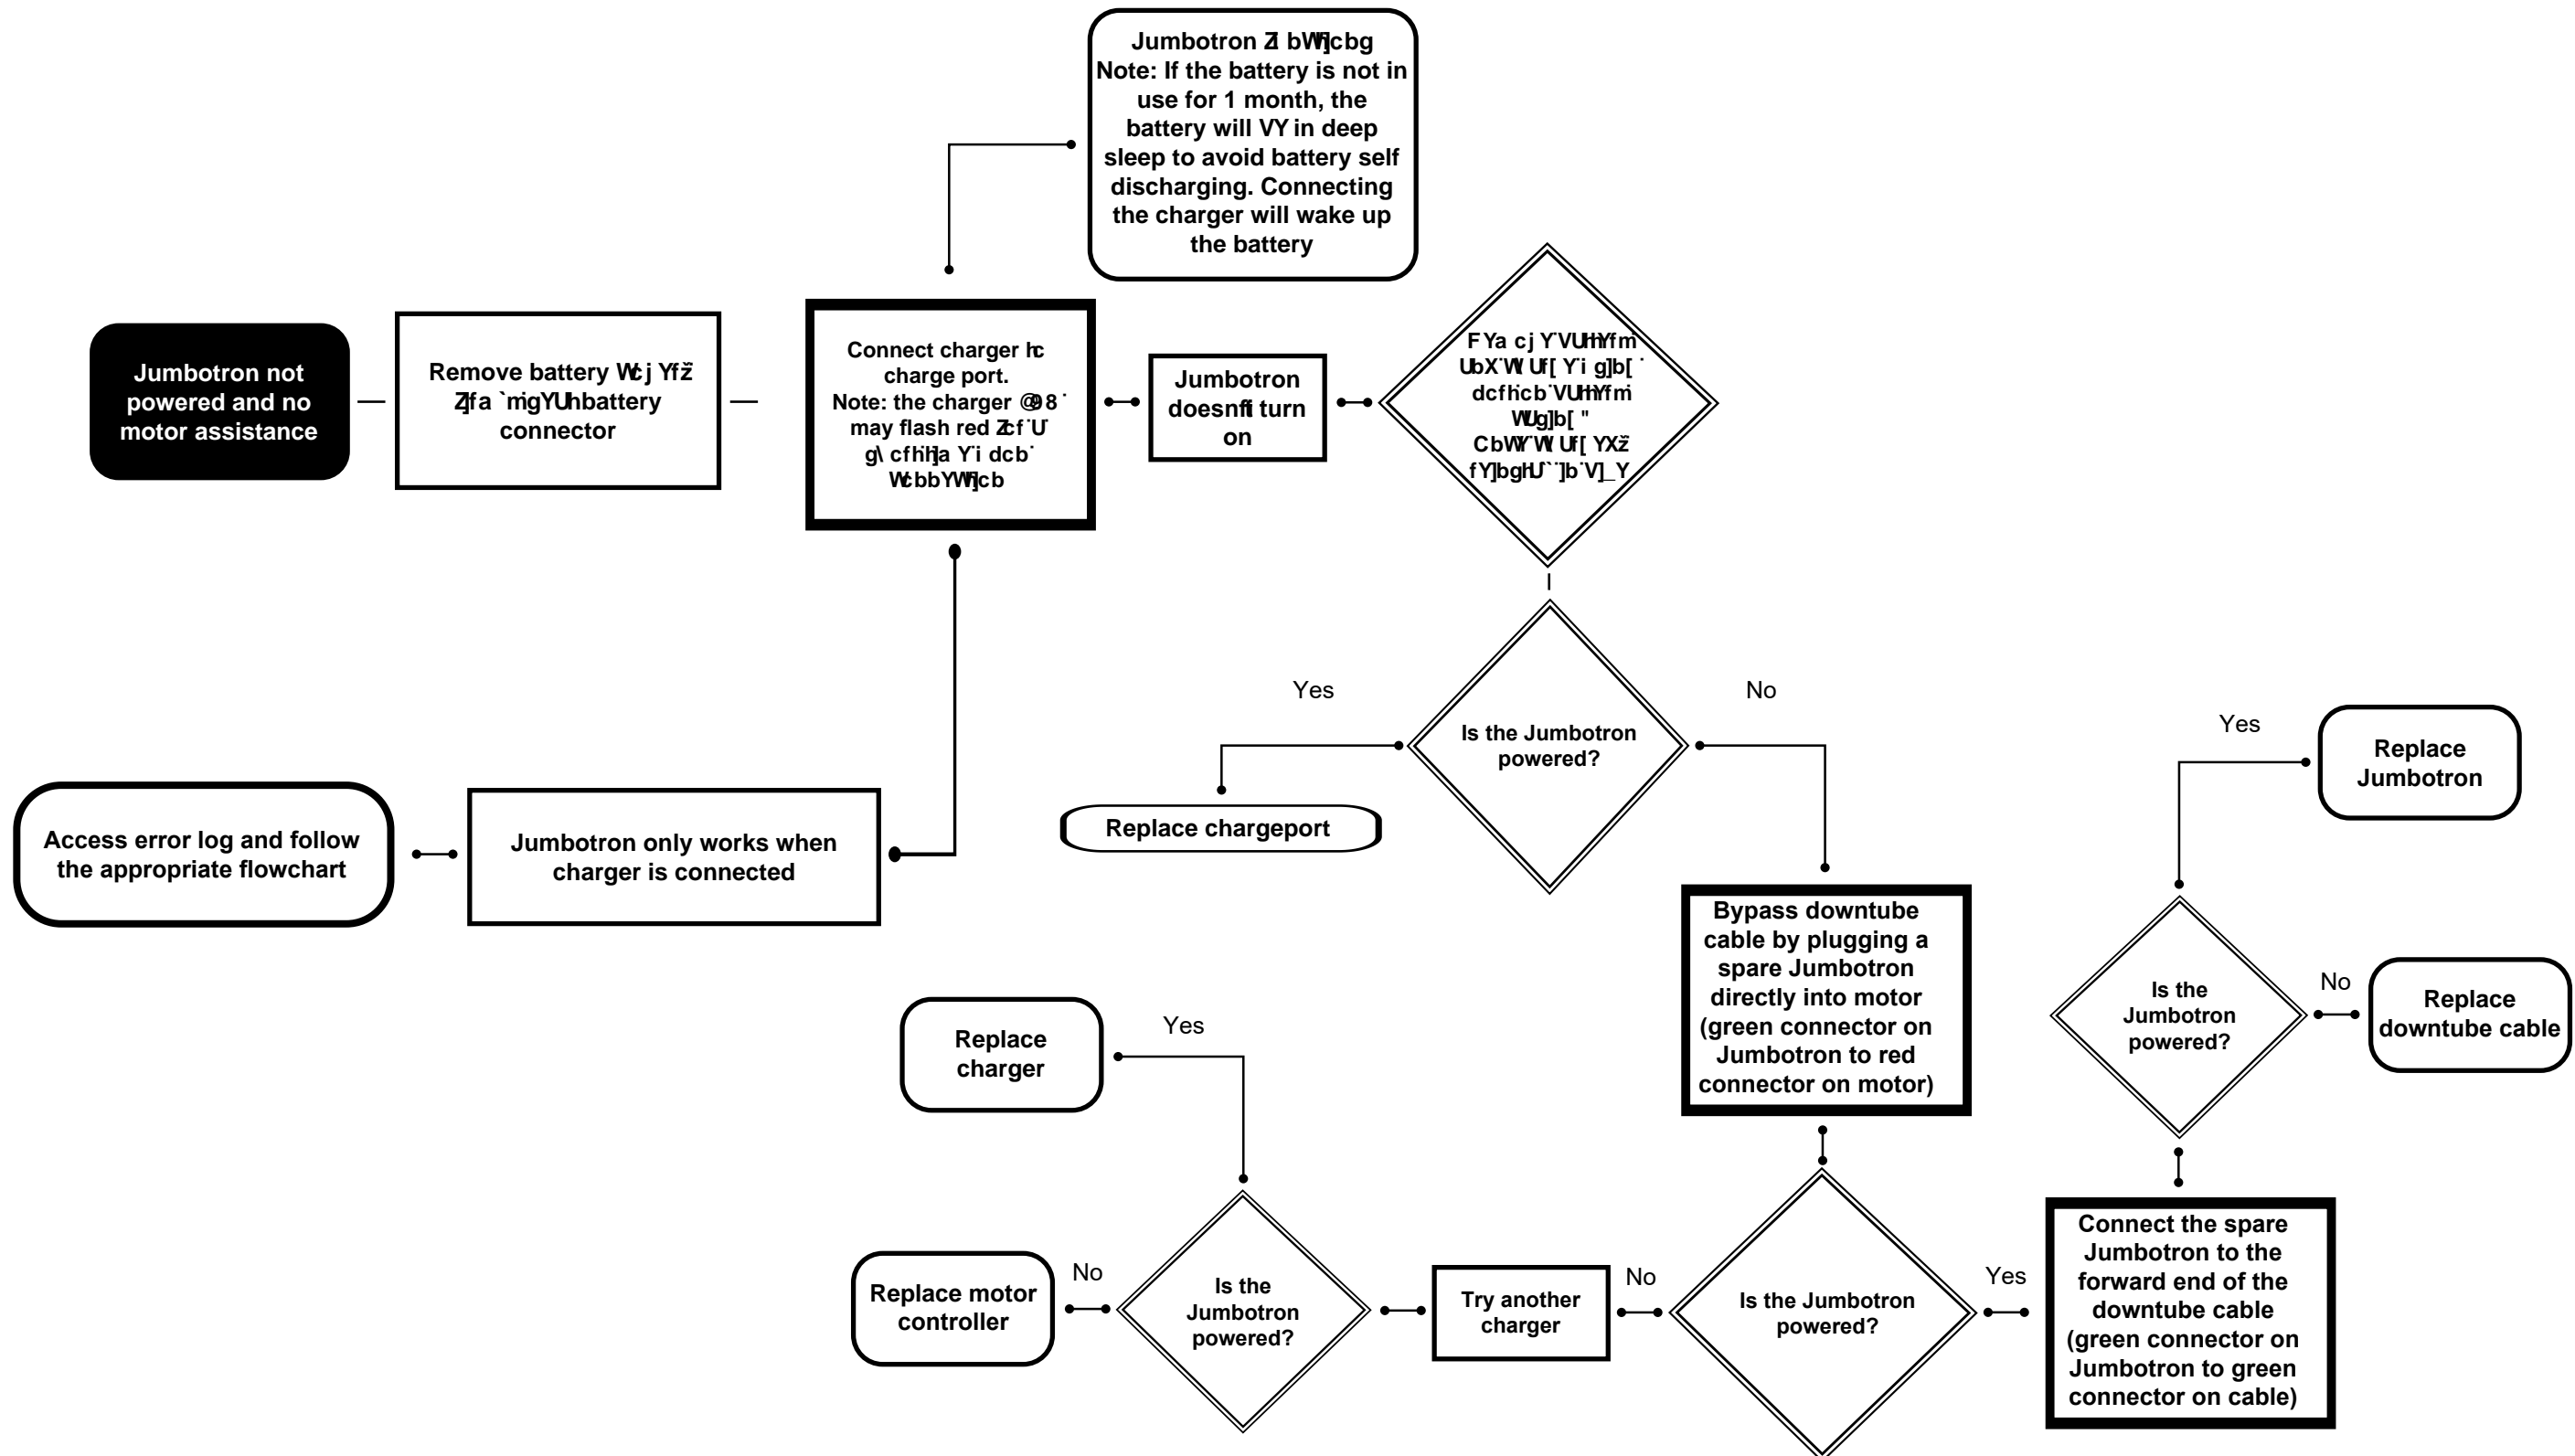


Jumbotron powered, no motor assistance, no error code

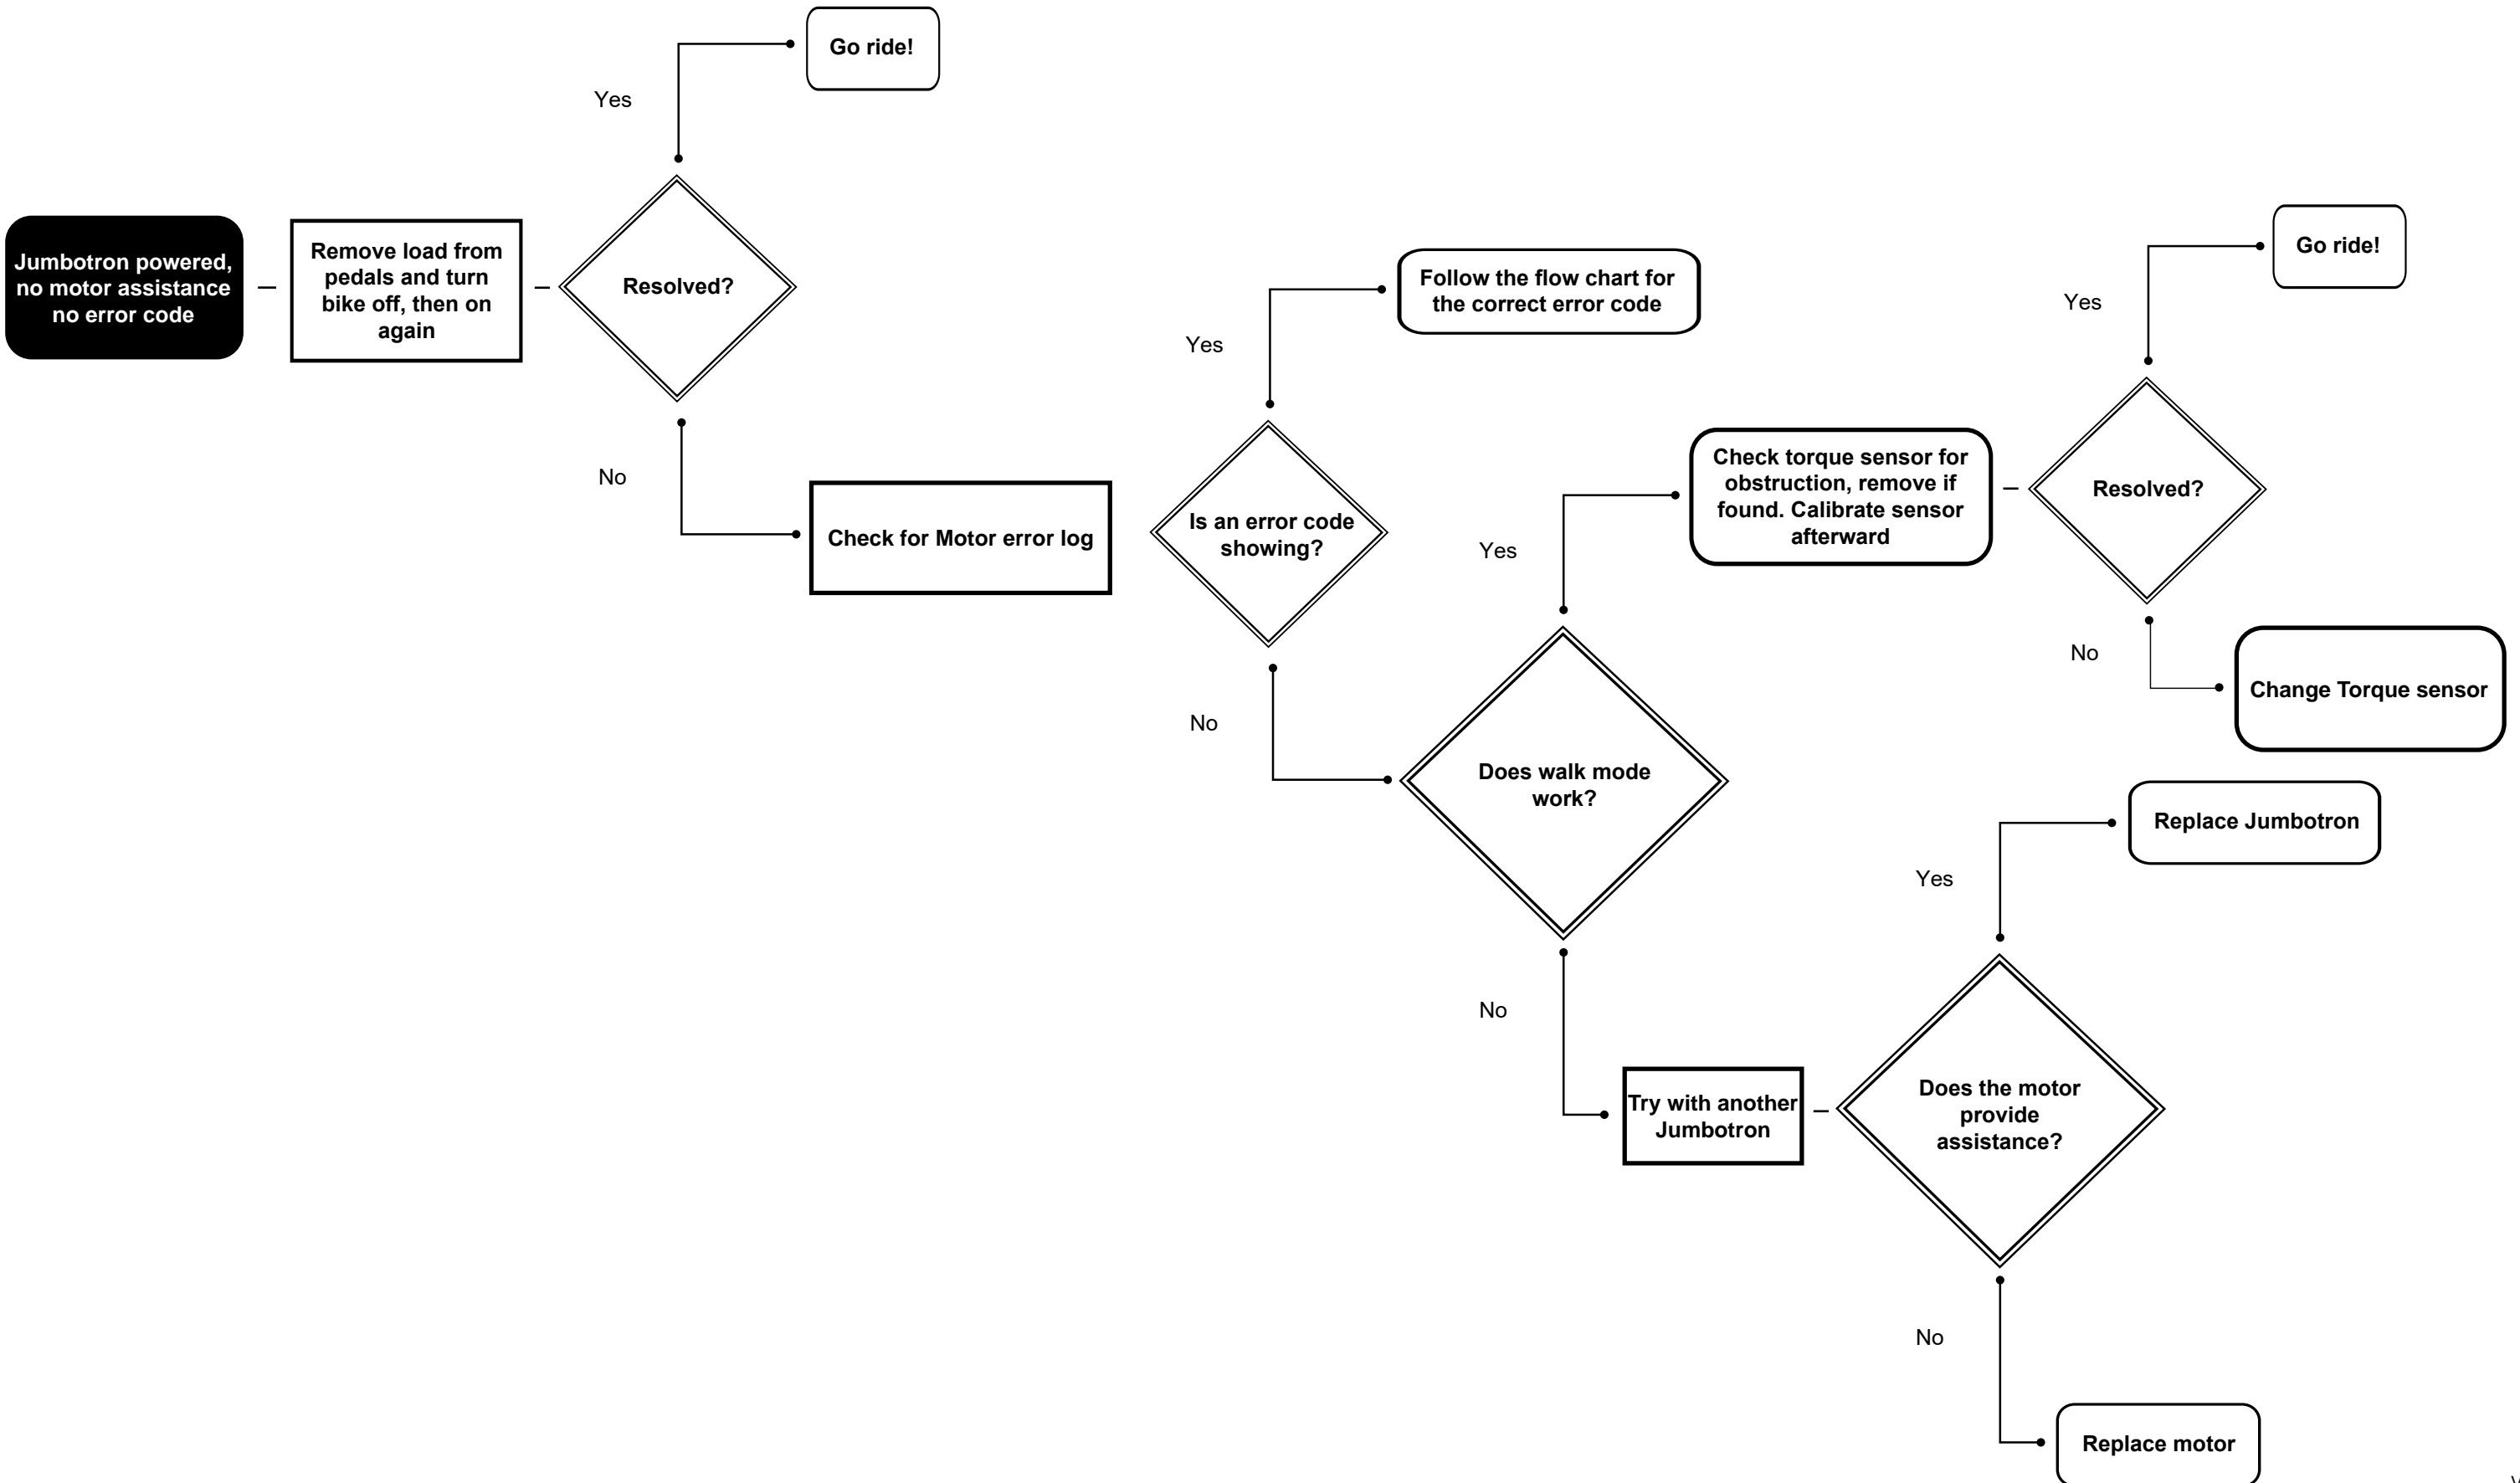

Jumbotron screen not powered, motor works

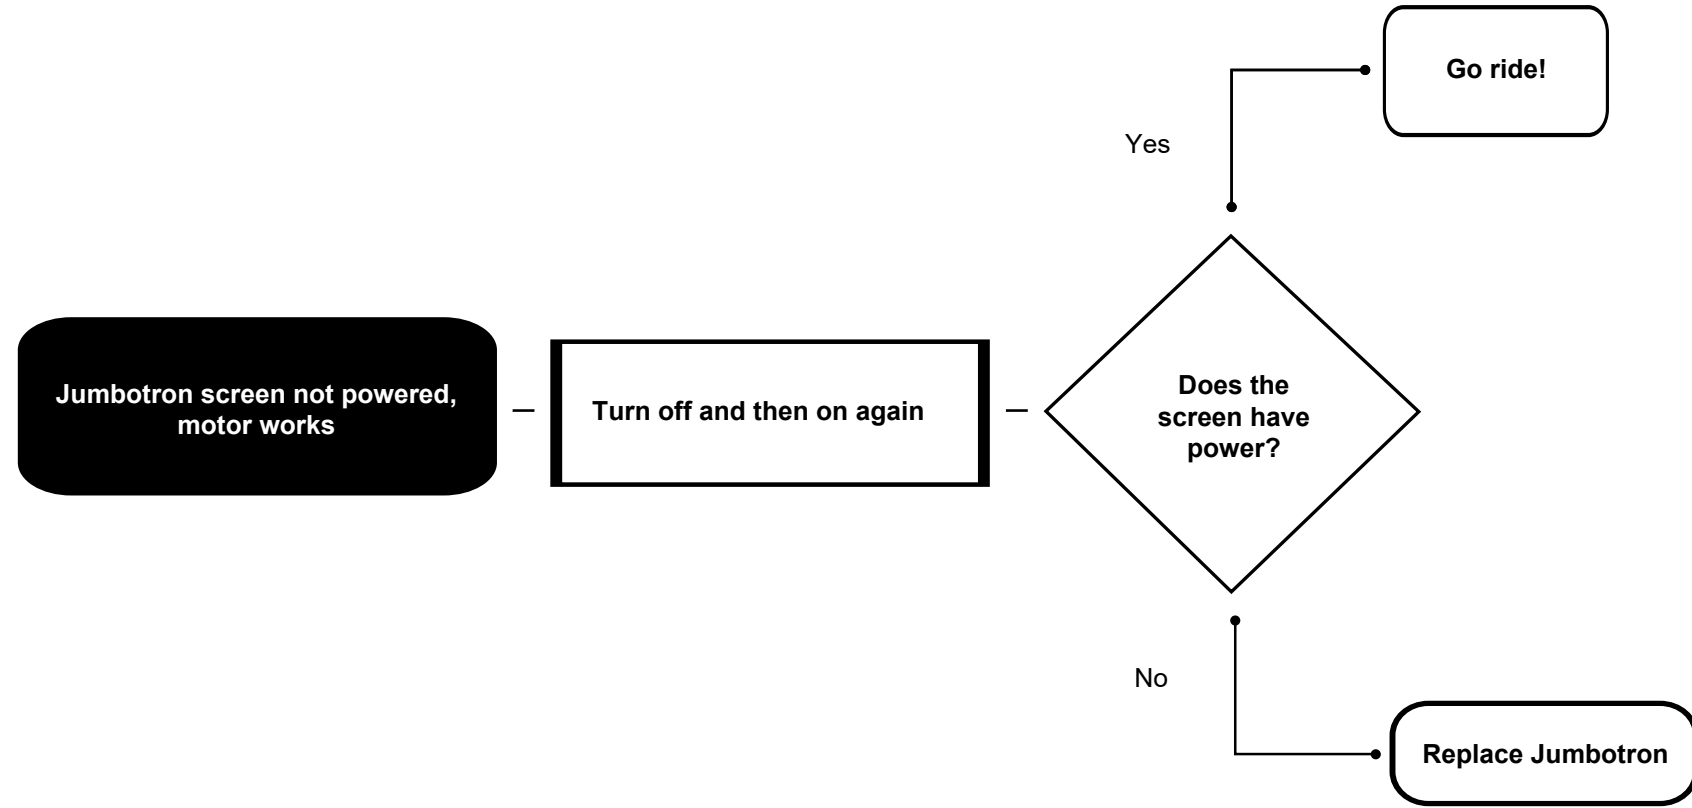

Intermittent motor assistance

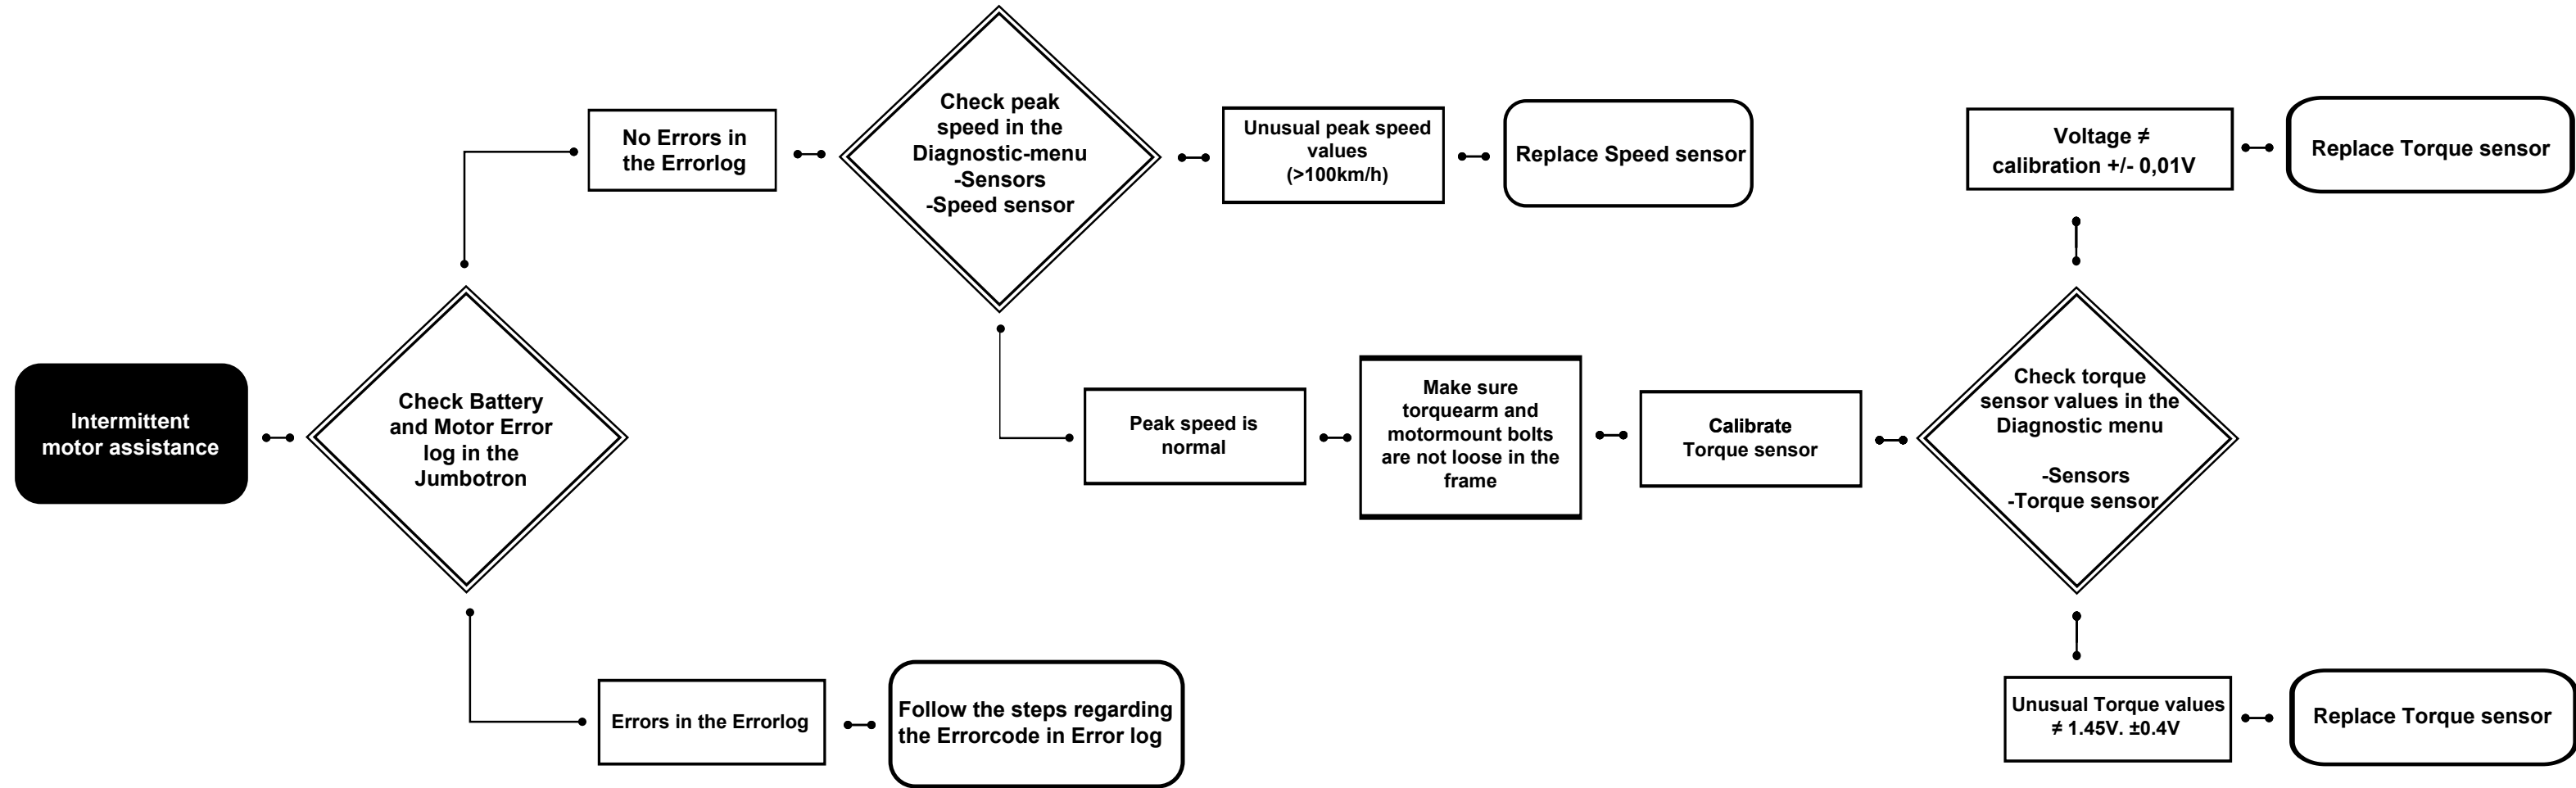

Reduced range

